


## 2-Color Display Digital Flow Switch



threads, straight piping, and bottom piping are selectable.

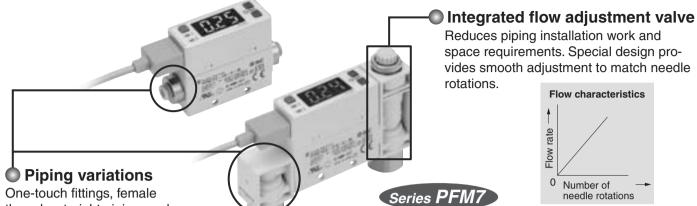

### Indicator function

Flashing speed varies according to flow rate. Color changes from green to red when rated flow rate is exceeded. Can be used as a simple monitor.


FLOW SENSOR	Flashing speed	Flow rate
Powta – Low	Fast	High
Oskc	Slow	Low


Flashing

### Connectors


e-con connector Sensor connector

Connection and removal of wiring is easy.

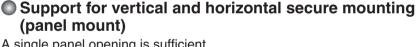

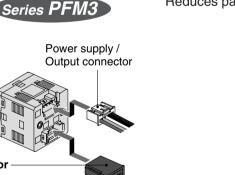

### A single panel opening is sufficient. Reduces panel fitting work and enables space-savings.

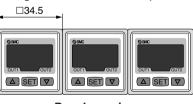



Panel opening



	Integrated type	Remot	e type			
	THERE .	C T TA	025			
Measurement flow range	Model	Model				
( <i>d</i> /min)	Model	Sensor unit	Display unit			
0.2 to 10 (0.2 to 5)	PFM710	PFM510				
0.5 to 25 (0.5 to 12.5)	PFM725	PFM525	PFM3			
1 to 50 (1 to 25)	PFM750	PFM550	FTINIOLL			
2 to 100 (2 to 50)	PFM711	PFM511				



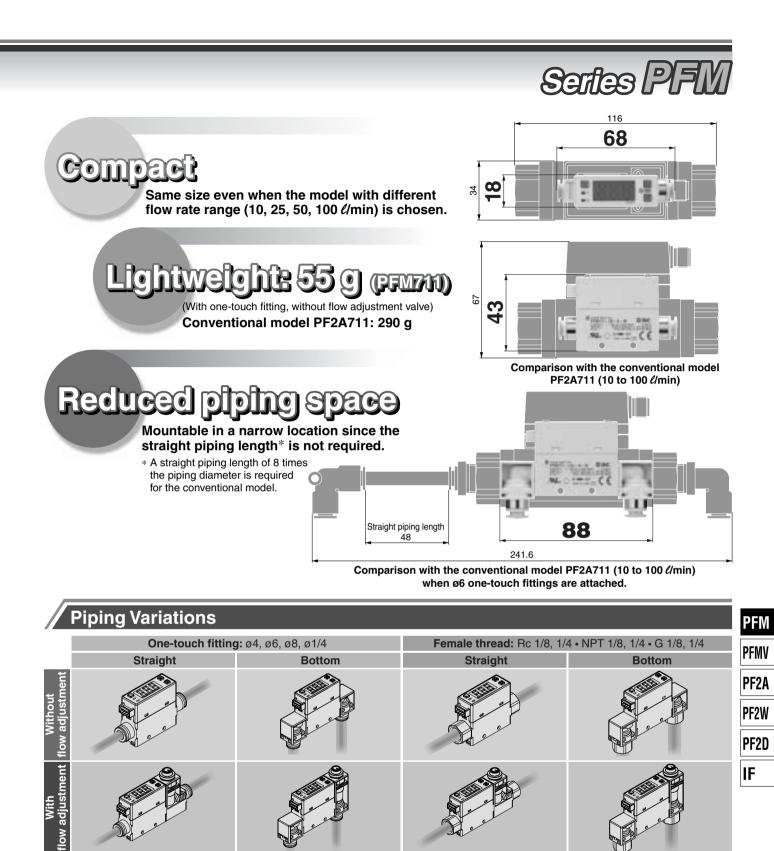

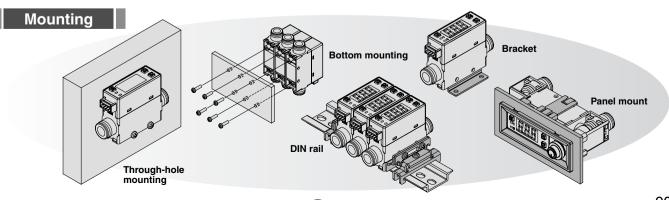

901

### **Main Functions**

### Selection of fluid

Air, Nitrogen (N<sub>2</sub>), Argon (Ar) or Carbon dioxide (CO<sub>2</sub>) can be selected using the buttons.

### Secret code setting function

The user must input a secret code to cancel the keylock mode. This ensures that only authorized persons can operate the switch.

For details and other functions, refer to page 939.

### Power-saving mode

Turning off the display can save power consumption.




The decimal point indicators flash in power-saving mode.

Selection of indication unit	<ul> <li>User can select between ANR and Nℓ/min for each fluid.</li> <li>[ANR] Indicates the flow rate converted to a volume under standard conditions: 20°C, 1 atm (atmosphere), 65%RH</li> <li>[Nℓ/min] Indicates the flow rate converted to a volume under normal conditions: 0°C, 1 atm (atmosphere).</li> </ul>						
External input	Can be selected from accumulated value external reset, auto-shift and auto-shift zero.						
Indication resolution	Minimum unit setting can be selected from 1 <i>d</i> /min, 0.1 <i>d</i> /min and 0.01 <i>d</i> /min. Depends on the model. Refer to the specifications (P. 939) for details.						


### **Several Combinations**


Depending on the installation conditions, it is possible to add or remove the flow adjustment valve, change the fitting type and the piping direction as desired.

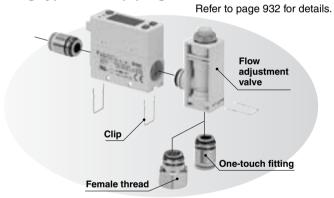



The accuracy may fluctuate by 2 to 3% just after replacement. (Repeatability does not change.)

### **Recommended Air Circuits**

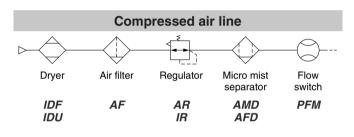

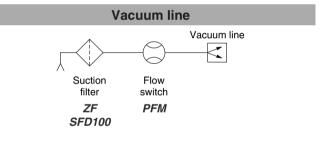

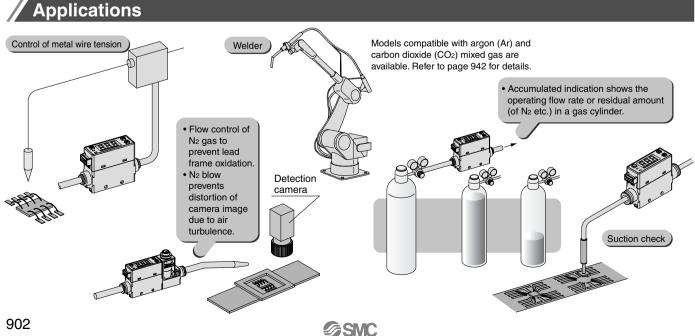

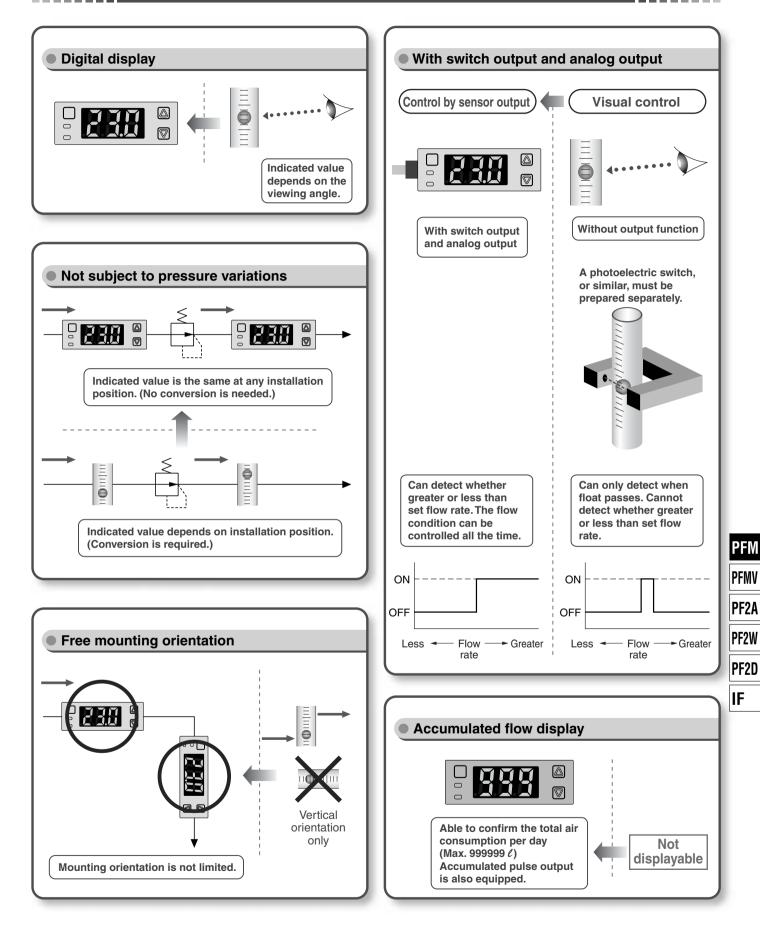

## 2-Color Display Digital Flow Switch

Series **PFM7** Integrated Display











Features	P. 900 to 903
How to Order	P. 906
Specifications	P. 908
Piping Specifications / Mass	P. 909
Analog Output	P. 909
Internal Circuits and Wiring Examples	P. 909
Dimensions	P. 910

How to Order	P. 918
Specifications	P. 920
Piping Specifications / Mass	P. 921
Analog Output	P. 921
Internal Circuits and Wiring Examples	P. 921
Dimensions	P. 922

Pressure Loss / Flow Characteristics	P. 930
Parts Description	P. 931
Construction	P. 931
Detection Principle	P. 931
Component Parts	P. 932
How to Order	P. 933
Specifications	P. 934
Analog Output	P. 934
Internal Circuits	P. 935
Descriptions	P. 936
Dimensions	P. 937
Function Details	P. 939
Changing the piping entry direction combination for IN and OUT side	P. 940

Compatible with argon (Ar) and carbon P. 942 dioxide (CO<sub>2</sub>) mixed gas

Specific Product Precautions P. 943

### Made to Order

PFM


PFMV

PF2A

PF2W

PF2D

IF

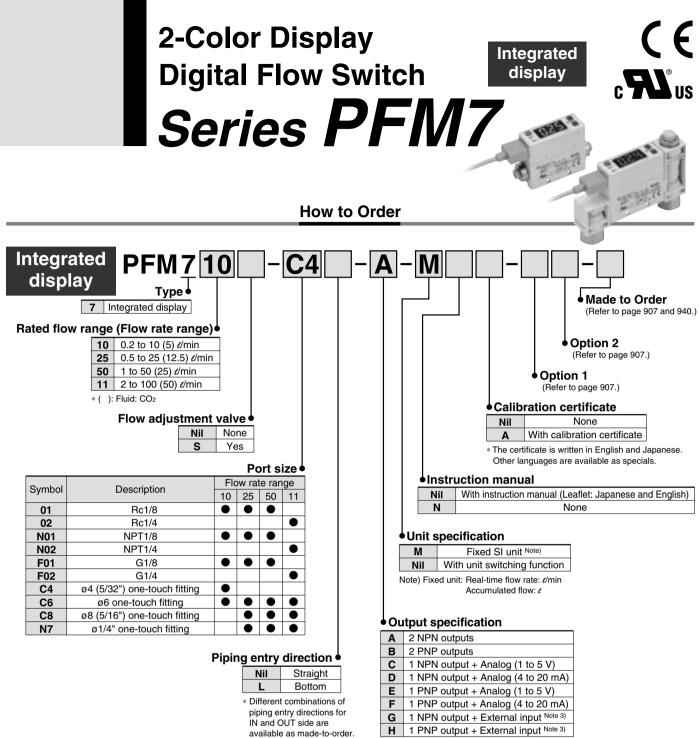

Note 3) User can select from accumulated value

external reset, auto-shift and auto-shift zero.

#### **Piping Variations**

i iping ranaas						
	With one-touch fitting	ngs (C4, C6, C8, N7)	Female thread (01, 02, N01, N02, F01, F02)			
	Straight (Nil)	Bottom (L)	Straight (Nil)	Bottom (L)		
Without flow adjustment valve (Nil)						
With flow adjustment valve (S)						


**GSMC** 

(Refer to page 940.)


### **Option 1**

Nil	W	Z
With lead wire with connector (2 m)	With lead wire with connector (2 m) + Rubber cover for connector (silicon rubber)	Without lead wire with connector
ZS-33-D Lead wire length 2 m	ZS-33-F ZS-33-D Lead wire length 2 m	

#### Option 2

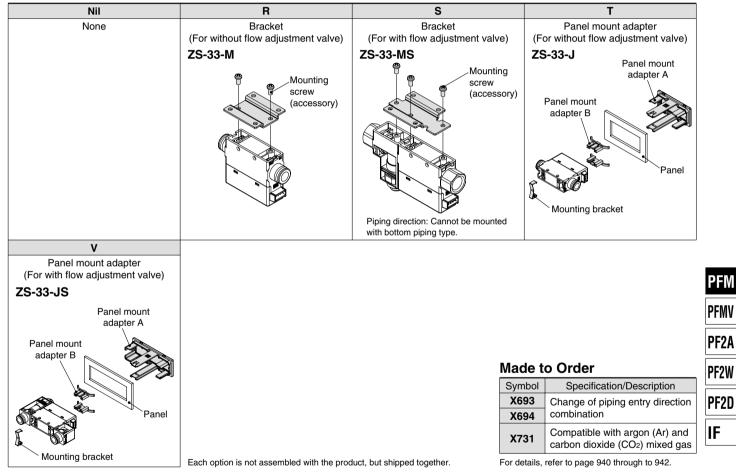

### DIN Rail Mounting Bracket (Order Separately)

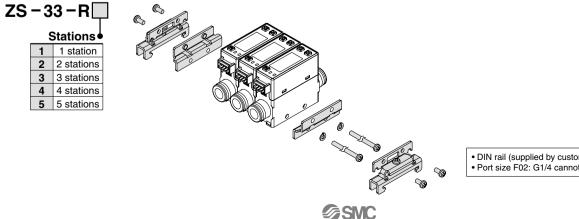

DIN rail (supplied by customers)
Port size F02: G1/4 cannot be mounted on the DIN rail.

### Specifications

	Model		PFM710	PFM725	PFM750	PFM711				
Applicable fluid				Dry air, N	2, Ar, CO2					
Applicable flui	a		(Air quality	(Air quality grade is JIS B8392.1-1, 1.2 to 1.6.2 and ISO8573.1-1, 1.2 to 1.6.2.)						
Rated flow ran	ge	Dry air, N <sub>2</sub> , Ar	0.2 to 10 <i>t</i> /min	0.5 to 25 <i>t</i> /min	1 to 50 <i>t</i> /min	2 to 100 <i>t</i> /min				
(Flow rate rang	je)	CO <sub>2</sub>	0.2 to 5 <i>t</i> /min	0.5 to 12.5 <i>t</i> /min	1 to 25 <i>t</i> /min	2 to 50 <i>t</i> /min				
Displayable range Note 1) Dry air, N CO2		Dry air, N <sub>2</sub> , Ar	0.2 to 10.5 ℓ/min	0.5 to 26.3 <i>t</i> /min	1 to 52.5 <i>t</i> /min	2 to 105 //min				
			0.2 to 5.2 <i>t</i> /min	0.5 to 13.1 <i>t</i> /min	1 to 26.2 <i>t</i> /min	2 to 52 <i>t</i> /min				
0	Note 1)	Dry air, N <sub>2</sub> , Ar	0 to 10.5 <i>t</i> /min	0 to 26.3 <i>t</i> /min	0 to 52.5 <i>t</i> /min	0 to 105 <i>t</i> /min				
Settable range	Note I)	CO <sub>2</sub>	0 to 5.2 <i>t</i> /min	0 to 13.1 <i>t</i> /min	0 to 26.2 <i>t</i> /min	0 to 52 <i>t</i> /min				
Minimum unit	setting N	lote 2)	0.01 <i>t</i> /min	0.1 <i>t</i> /min	0.1 <i>t</i> /min	0.1 <i>t</i> /min				
Accumulated pul	se flow ra	ate exchange value	0.1 <i>t</i> /pulse	0.1 <i>t</i> /pulse	0.1 <i>t</i> /pulse	1 <i>t</i> /pulse				
Indication unit	Note 3)		Real-time flow rate $\ell$ /min, CFM x 10 <sup>-2</sup> Accumulated flow $\ell$ , ft <sup>3</sup> x 10 <sup>-1</sup>							
Linearity					.S. or less (Fluid: Dry air) acy: ±5%F.S. or less					
Repeatability					s (Fluid: Dry air) acy: ±3%F.S. or less					
Pressure chara	acteristi	cs		,	ased on 0.35 MPa)					
Temperature c	haracter	istics			15 to 35°C) 0 to 50°C)					
Operating pres	sure rai	nge		–100 kPa	to 750 kPa					
Rated pressure range			–70 kPa to 750 kPa							
Proof pressure	•		1 MPa							
Accumulated f	low rang	je	Max. 999999 & Note 4)							
Switch output			NPN or PNP open collector output							
Ν	/laximur	n load current	80 mA							
N	/laximur	n applied voltage	28 VDC (at NPN output)							
I	nternal	voltage drop	NPN output: 1 V or less (at 80 mA) PNP output: 1.5 V or less (at 80 mA)							
F	Respons	e time	1 s (50 ms, 0.5 s, 2 s can be selected.)							
C	Dutput p	rotection	Short-circuit protection, Overcurrent protection							
Accumulated p	oulse ou	tput	NPN or PNP open collector output (Same as switch output)							
		Response time	1.5 s or less (90% response)							
Analog output	Note 5)	Voltage output	Voltage output: 1 to 5 V Output impedance: 1 k $\Omega$							
		Current output	Current output: 4 to 20 mA Max. load impedance: 600 $\Omega,$ Min. load impedance: 50 $\Omega$							
Hysteresis Note	6)	teresis mode			able					
-	Wind	low comparator mode			able					
External input				o-voltage input (Reed or Sol	/ 1					
Display metho	d		3-digit, 7-segment LED 2-color display (Red/Green) Renewed cycle: 10 times/sec							
Status LED's			OUT1: Illuminates when	output is turned ON (Green)	. OUT2: Illuminates when o	output is turned ON (Red).				
Power supply	-		24 VDC ± 10%							
Current consu	mption		55 mA or less							
-	Enclosu		IP40							
Operating fluid temperature			0 to 50°C (with no freezing and condensation)							
			Operating: 0 to 50°C Stored: -10 to 60°C (with no freezing and condensation)							
			Operating, Stored: 35 to 85%R.H. (with no condensation)							
resistance		id voltage		1000 VAC for 1 min. betwee						
	nsulatio	n resistance	50 $M\Omega$ or more (500 VDC Mega) between external terminal and case							
_		n resistance	Without orifice: 10 to 500 Hz with a 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration, in each X, Y, Z direction for 2 hrs, whichever is smaller. With orifice: 10 to 150 Hz with a 1.5 mm amplitude or 19.6 m/s <sup>2</sup> acceleration, in each X, Y, Z direction for 2 hrs, whichever is smaller.							
	mpact r	esistance	490 m/s <sup>2</sup> in X, Y, Z directions 3 times each							

Note 1) When the minimum unit setting 0.01 //min is selected for 10 //min type, the indication upper limit will be [9.99 //min].

When the minimum unit setting 0.1 t/min is selected for 100 t/min type, the indication upper limit will be [99.9 t/min].

Note 2) User can select between 0.01 //min and 0.1 //min for the PFM710, and between 0.1 //min and 1 //min for the PFM711 respectively.

If the indication unit is selected to "CFM", the minimum unit setting cannot be changed. At the time of shipment from the factory, the minimum unit setting is set to 0.1 *d*/min for the PFM710 and 1 *d*/min for the PFM711 respectively.

Note 3) Set to "ANR" at the time of shipment from the factory.

"ANR" is used for standard conditions: 20°C, 1 atm and 65% R.H.

"N $\ell$ /min" is used for normal conditions: 0°C and 1 atm.

When equipped with a unit switching function. (The SI unit (*t*/min or *t*) is fixed for types with no unit switching function.)

Note 4) Cleared when the power supply is turned off. Hold function can be selected. (Interval of 2 min or 5 min can be selected). If the 5 min interval is selected, the life of the memory element (electronic part) is limited to 1 million cycles. (If energized for 24 hours, life is calculated as 5 min x 1 million = 5 million min = 9.5 years). Therefore, if using the hold function, calculate the memory life for your operating conditions, and use within this life.

Note 5) Set to 1.5 s (90%), can be changed to 100 ms.


Note 6) Set to hystresis mode at the time of shipment from the factory. Can be changed to window comparator mode using push-buttons.




### **Piping Specifications / Mass**


Part no.	01	02	N01	N02	F01		F02	C4	C6	C6	N7
Tartho.	01	02	NUT	1102	101		102		00		1117
Port size	Rc 1/8	Rc 1/4	NPT 1/8	NPT 1/4	G1/8		G1/4	ø4 (5/32") one-touch fitting	ø6 one-touch fitting	ø8 (5/16") one-touch fitting	ø1/4" one-touch fitting
Mass	Stra Botte Stra	om N	Nithout	orifice: 9 orifice: 1 ice: 135	05 g	Straight Bottom Straight	Without orifice: 125 g Without orifice: 135 g With orifice: 165 g	Bot	tom With	nout orifice: 5 nout orifice: 6 n orifice: 95 g	5 g
	Bott	om V	Nith orif	ice: 145	g	Bottom	With orifice: 175 g	Bot	tom With	n orifice: 105	g
Wetted parts material	al I CP, PBT, Brass (Electroless nickel plated), HNBR (+ Eluoro coated), EKM (+ Eluoro coated), Silicon, Au, Stainless steel 304										

Analog Output Note: Analog output at maximum rated flow rate when CO<sub>2</sub> is selected is 3 [V] for the voltage output type and 12 [mA] for the current output type.

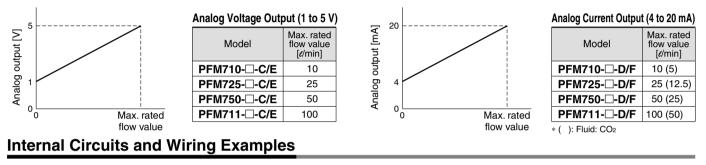

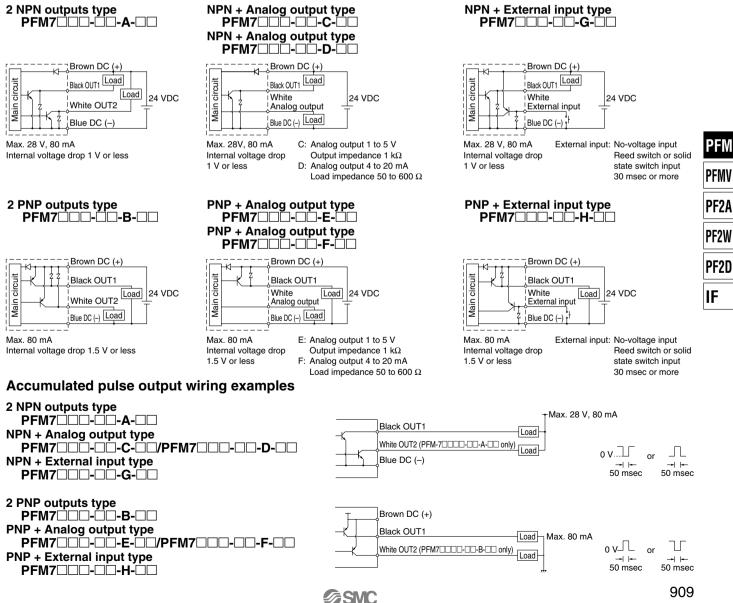


### Dimensions

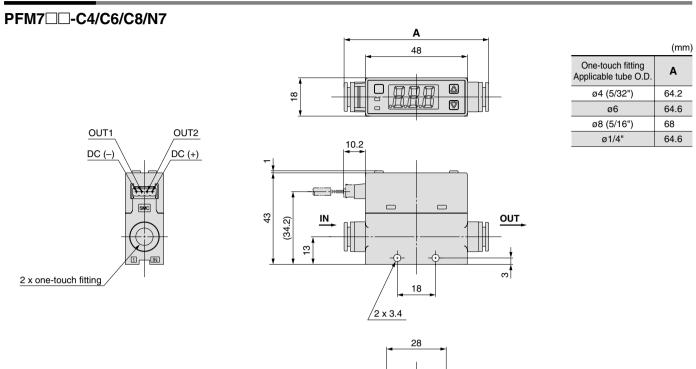

œ


2 x 2.6 depth 5


PFM7DD-C4L/C6L/C8L/N7L

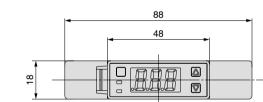


 $\bigcirc$ 


	(mm)
One-touch fitting Applicable tube O.D.	Α
ø4 (5/32")	10.1
ø6	10.3
ø8 (5/16")	12
ø1/4"	10.3

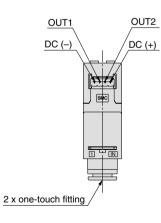

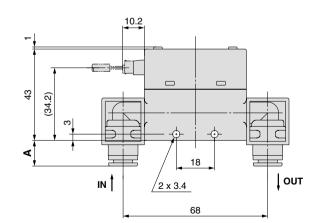


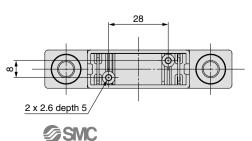



### Dimensions

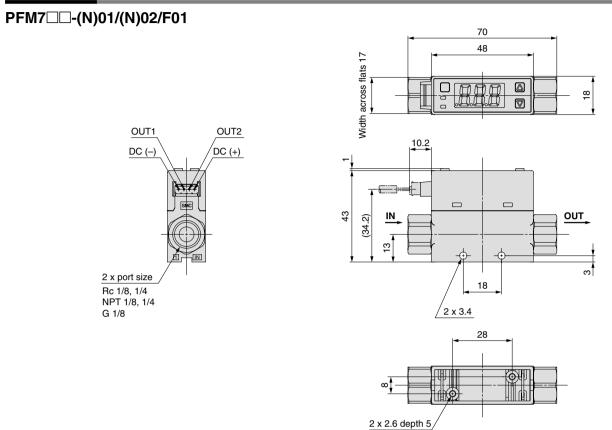


### PFM7□□-(N)01L/(N)02L/F01L

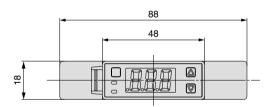

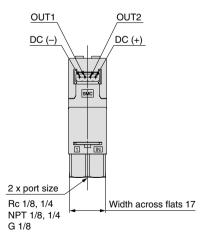

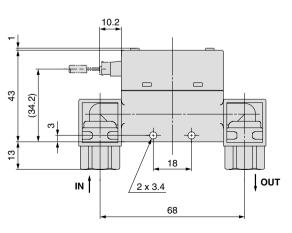


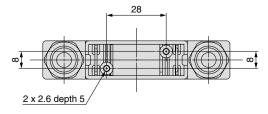



PFM
PFMV
PF2A
PF2W
PF2D
IF

### Dimensions


### PFM7□□-F02

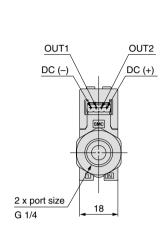


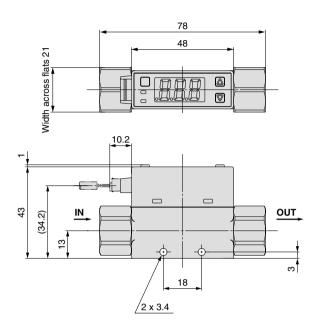

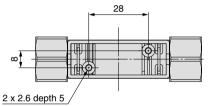


PFM7□□-F02L

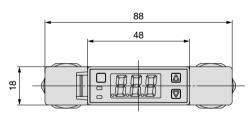

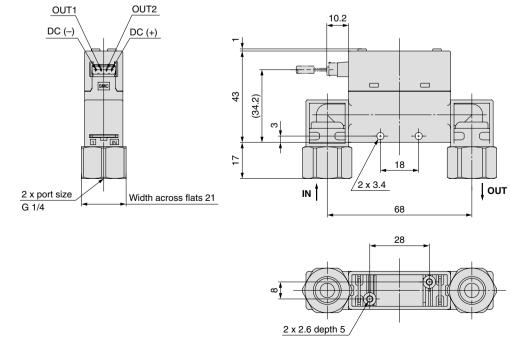


### Dimensions

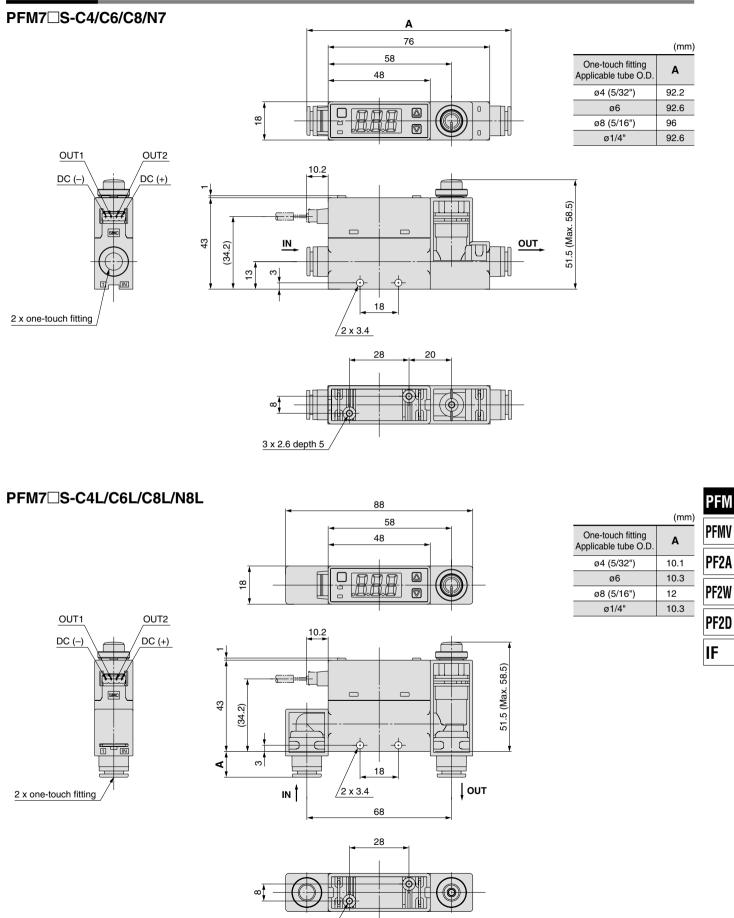



2 x 2.6 depth 5

### Dimensions

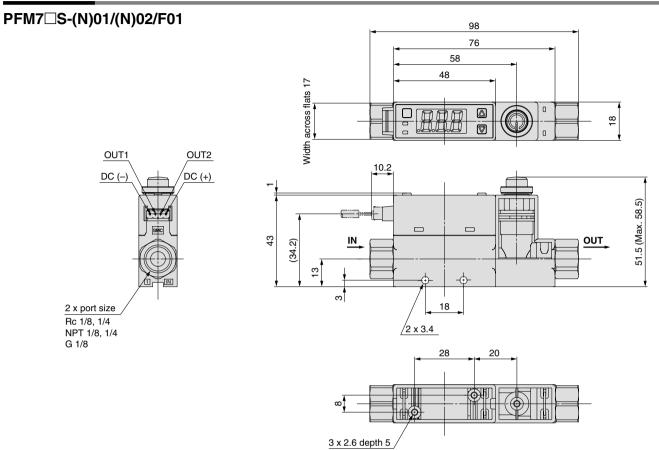

PFM7□S-(N)01L/(N)02L/F01L

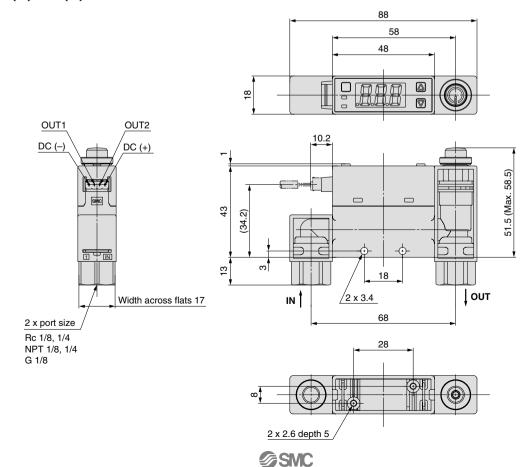

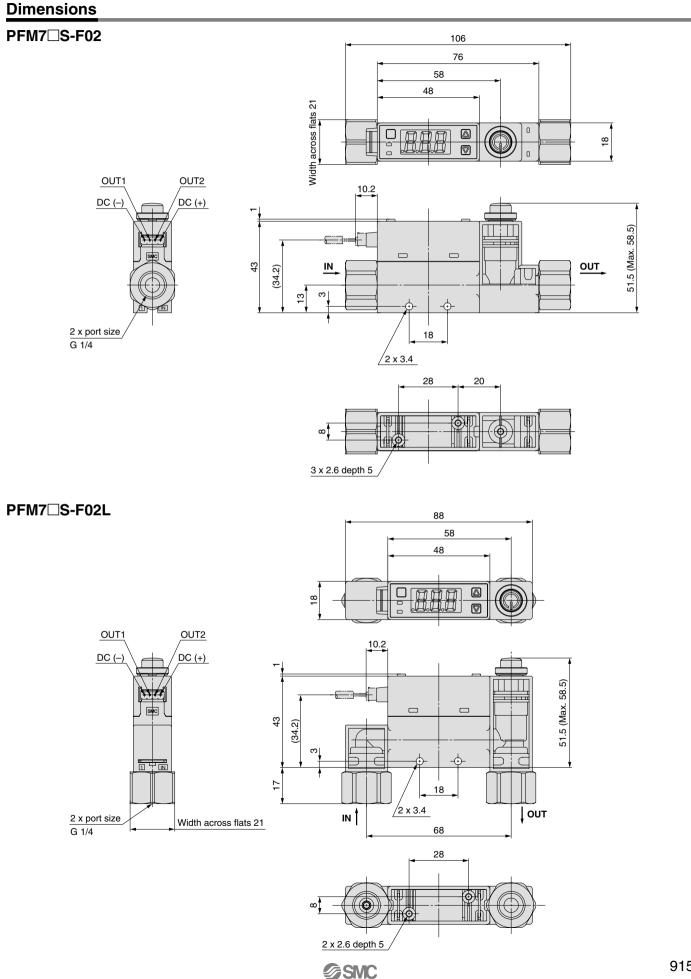

PFM

PFMV

PF2A


PF2W


PF2D

IF


### Dimensions


### Panel mount / Without flow adjustment valve / Straight

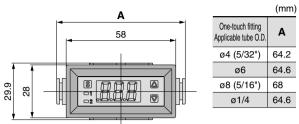

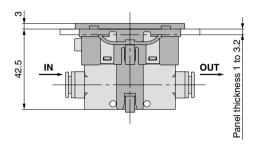


### Panel mount / Without flow adjustment valve

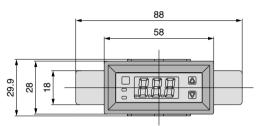

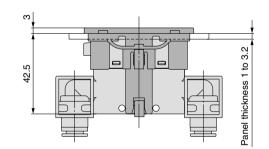


### Panel Fitting Dimensions

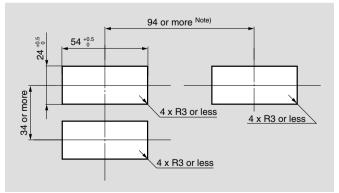



#### Panel thickness 1 to 3.2 mm

Note) Piping entry direction: Minimum dimensions for bottom side piping. If using straight piping, the piping material and tubing need to be taken into consideration when designing the system. If a bend (R) is used, limit it to R3 or less.

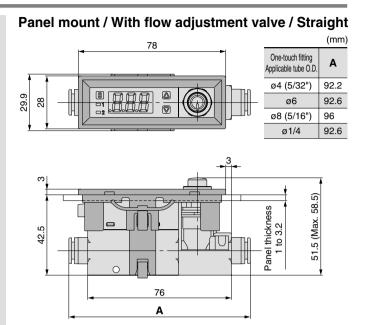


### Panel mount / With flow adjustment valve

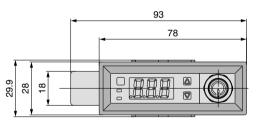

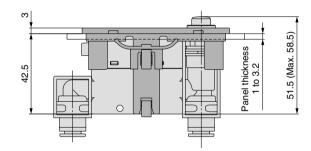

### **Panel Fitting Dimensions**

**SMC** 

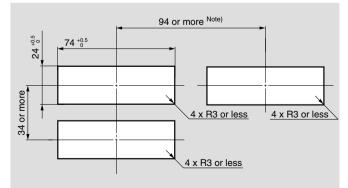


#### Panel thickness 1 to 3.2 mm


Note) Piping entry direction: Minimum dimensions for bottom side piping. If using straight piping, the piping material and tubing need to be taken into consideration when designing the system. If a bend (R) is used, limit it to R3 or less.

### Dimensions

### With bracket / Without flow adjustment valve

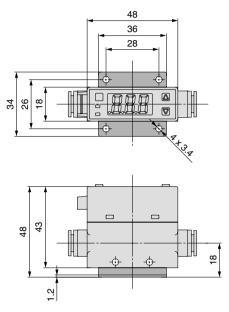


### **DIN rail mounting**

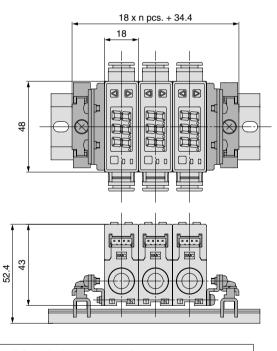


DIN rail (supplied by customers)
Port size, F02: G1/4 cannot be mounted on the DIN rail.

### With bracket / With flow adjustment valve

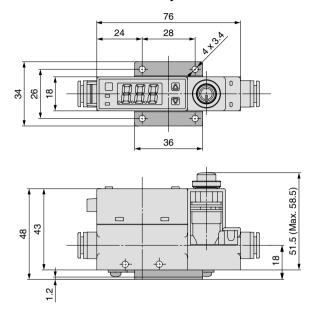

## Lead wire with connector ZS-33-D

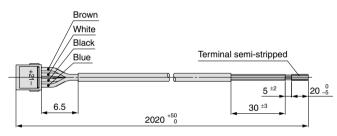


## Cable Specifications of Lead Wire with Connector

Rated temperature		80°C
Rated voltage		30 V
Number of v	wires	4
	Nominal cross section area	AWG26
Conductor	Material	Soft copper wire
Conductor	Construction	28 / 0.08 mm
	External diameter	Approx. 0.50 mm
	Material	Cross-linked vinyl chloride resin compound
Insulation	External diameter	Approx. 1.00 mm
	Colors	Brown, White, Black, Blue
Sheath	Material	Oil-resistant vinyl chloride resin compound
Sneath	Color	Light gray
Finished ex	ternal diameter	ø3.5 <sup>+0.10</sup> 0.25

PFMV PF2A PF2W PF2D IF

PFM

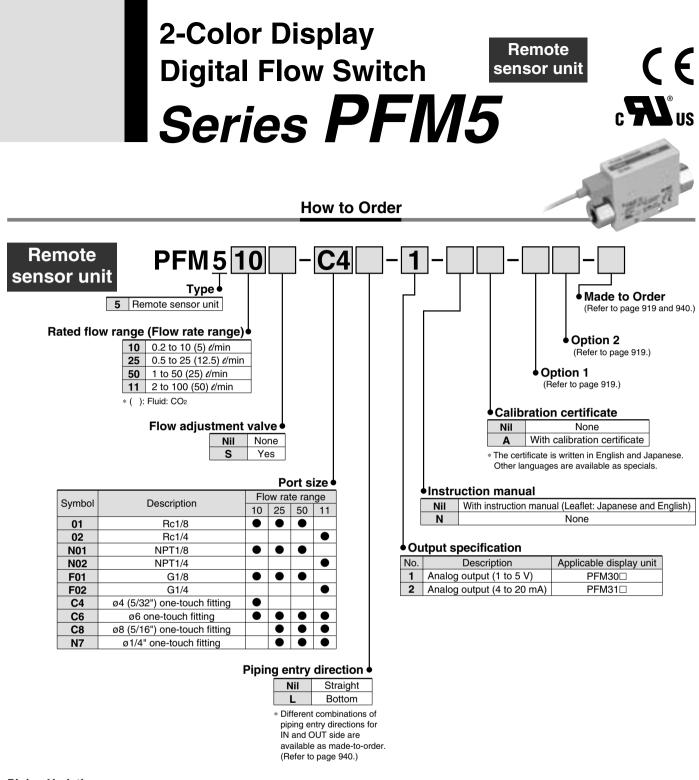

Piping	Variations


	With one-touch fitti	ngs (C4, C6, C8, N7)	Female thread (01, 02	2, N01, N02, F01, F02)
	Straight (Nil)	Bottom (L)	Straight (Nil)	Bottom (L)
Without flow adjustment valve (Nil)				
With flow adjustment valve (S)				




### **Option 1**

Nil	W	Z
With lead wire with connector (2 m)	With lead wire with connector (2 m) + Rubber cover for connector (silicon rubber)	Without lead wire with connector
ZS-33-D Lead wire length 2 m	ZS-33-F ZS-33-D Lead wire length 2 m	

#### **Option 2**

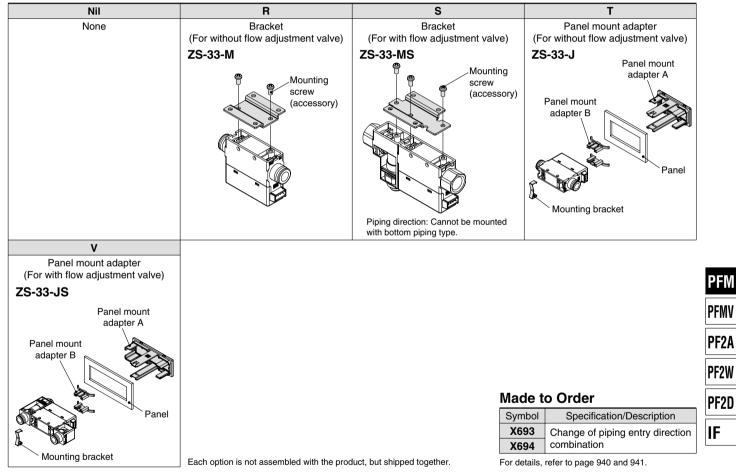

### **DIN Rail Mounting Bracket (Order Separately)**

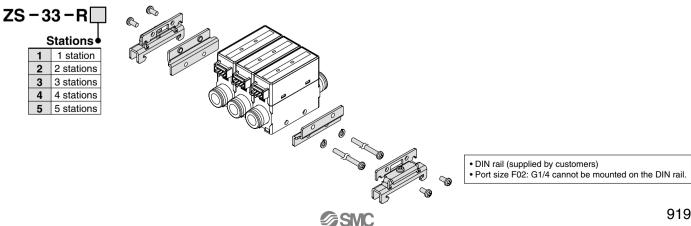

### Specifications

Model		PFM510	PF	M525	PFM550	PFM511		
Applicable fluid		Dry air, N₂, Ar, CO₂ (Air quality grade is JIS B8392.1-1, 1.2 to 1.6.2 and ISO8573.1-1, 1.2 to 1.6.2.)						
Rated flow ran	ge Note)	Dry air, N <sub>2</sub> , Ar	0.2 to 10 <i>t</i> /min	0.5 to	25 <i>t</i> /min	1 to 50 ℓ/min	2 to 100 <i>e</i> /min	
(Flow rate rang	ge)	CO <sub>2</sub>	0.2 to 5 <i>t</i> /min	0.5 to	12.5 <i>t</i> /min	1 to 25 <i>t</i> /min	2 to 50 <i>t</i> /min	
Accuracy					±3%F.S	. or less		
Repeatability					±1%F.S. or less	s (Fluid: Dry air)		
Pressure chara	acteristi	cs		±59	%F.S. or less (b	ased on 0.35 MPa)		
Temperature c	haracte	ristics			±2%F.S. (1 ±5%F.S. (			
Operating pres	ssure ra	nge			-100 kPa	to 750 kPa		
Rated pressure	e range				–70 kPa t	o 750 kPa		
Proof pressure	e				1 N	IPa		
Analog output Voltage output		50 msec or 1 s (with response time selection function: 1 s at no-voltage input) $\rightarrow$ Refer to the internal circuits and wiring examples on page 921.						
		Voltage output	Voltage output: 1 to 5 V Output impedance: 1 k $\Omega$					
	Current output		Current output: 4 to 20 mA Max. load impedance: 600 $\Omega,$ Min. load impedance: 50 $\Omega$					
Status LED's			Power ON indicator: Lights when power is turned on (Green). Flow rate indicator: Flashes when flow is applied (Green).					
Power supply	voltage		24 VDC ± 10%					
Current consu	mption				35 mA	or less		
E	Inclosur	e			IP	40		
0	Operating	fluid temperature		0 to 50°	°C (with no free:	zing and condensation)		
0	Operating	temperature range	Operating:	0 to 50°C 5	Stored: -10 to 60	D°C (with no freezing and c	ondensation)	
-	Operating humidity range		Operating, Stored: 35 to 85% R.H. (with no condensation)					
rogiotopoo	withstand voltage		1000 VAC for 1 min. between external terminal and case					
Ir	nsulatio	n resistance	50 M <u>s</u>	2 or more (50	0 VDC Mega) b	etween external terminal a	nd case	
Vibration resistance		Without orifice: 10 to 500 Hz with a 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration, in each X, Y, Z direction for 2 hrs, whichever is smaller. With orifice: 10 to 150 Hz with a 1.5 mm amplitude or 19.6 m/s <sup>2</sup> acceleration, in each X, Y, Z direction for 2 hrs, whichever is smaller.						
Ir	mpact re	esistance	490 m/s <sup>2</sup> in X, Y, Z directions 3 times each					

Note: Flow rate unit is based on standard conditions (20°C, 1 atm, 65% RH).


### **Piping Specifications / Mass**

Part no.	01	02	N01	N02	F01		F02	C4	C6	C6	N7
Port size	Rc 1/8	Rc 1/4	NPT 1/8	NPT 1/4	G1/8		G1/4	ø4 (5/32") one-touch fitting	ø6 one-touch fitting	ø8 (5/16") one-touch fitting	ø1/4" one-touch fitting
Mass	Stra Botte Stra Botte	om N ight N	Without Without With orifi With orifi	orifice: 1 ce: 135	05 g g	Straight Bottom Straight Bottom	Without orifice: 125 g Without orifice: 135 g With orifice: 165 g With orifice: 175 g	Bot Stra	tom With aight With	nout orifice: 5 nout orifice: 6 n orifice: 95 g n orifice: 105	5 g
Wetted parts material LCP, PBT, Brass (Electroless nickel plated), HNBR (+ Fluoro coated), FKM (+ Fluoro coated), Silicon, Au, Stainless steel 304											

Analog Output

Note: Analog output at maximum rated flow rate when CO<sub>2</sub> is selected is 4.57 [V] for the voltage output type and 18.28 [mA] for the current output type. Analog Voltage Output (1 to 5 V)


\* ( ): Fluid: CO2

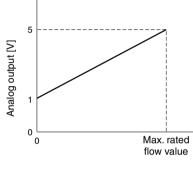


Model	Max. rated flow value [ℓ/min]
PFM510-□-1	10 (5)
PFM525-□-1	25 (12.5)
PFM550-□-1	50 (25)
PFM511-□-1	100 (50)

## Internal Circuits and Wiring Examples



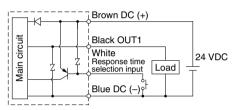

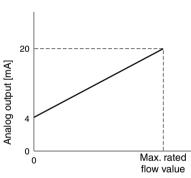


### Analog Current Output (4 to 20 mA)

Model	Max. rated flow value [//min]
PFM510-□-2	10 (5)
PFM525-□-2	25 (12.5)
PFM550-□-2	50 (25)
PFM511-□-2	100 (50)
* ( ): Fluid: CO2	

PFM
PFMV
PF2A
PF2W
PF2D
IF


### Dimensions

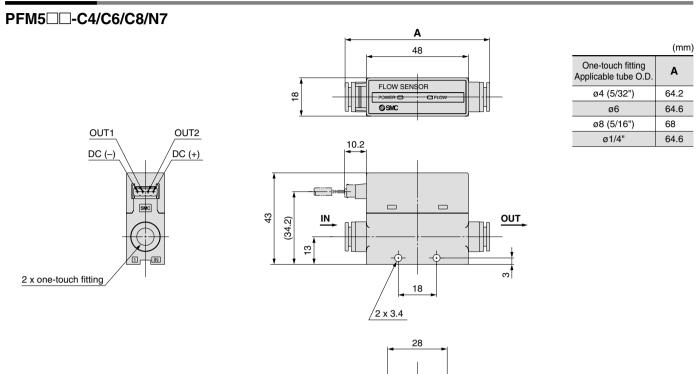

œ


2 x 2.6 depth 5


PFM5 -- C4L/C6L/C8L/N7L

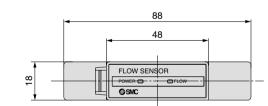


 $\bigcirc$ 


	(mm)
One-touch fitting Applicable tube O.D.	Α
ø4 (5/32")	10.1
ø6	10.3
ø8 (5/16")	12
ø1/4"	10.3

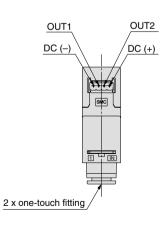

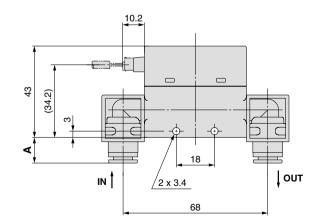


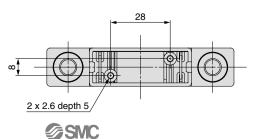



### Dimensions

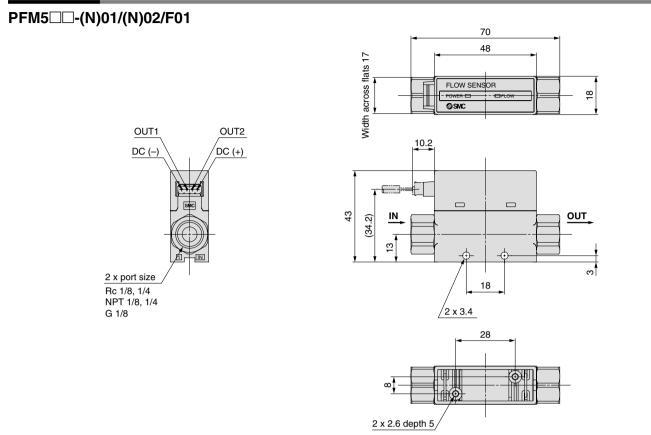


### PFM5□□-(N)01L/(N)02L/F01L

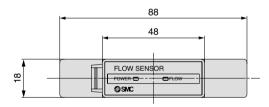

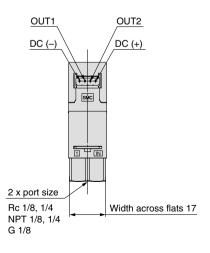

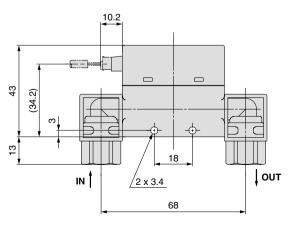


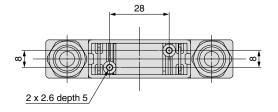



PFM
PFMV
PF2A
PF2W
PF2D
IF

### Dimensions


### PFM5□□-F02

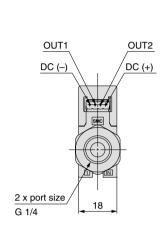


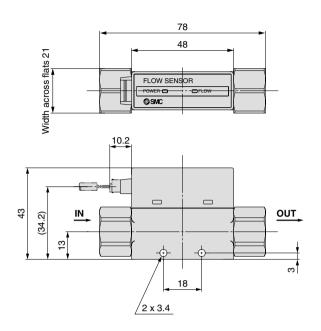

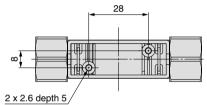


PFM5

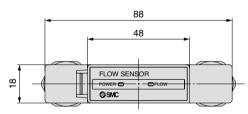

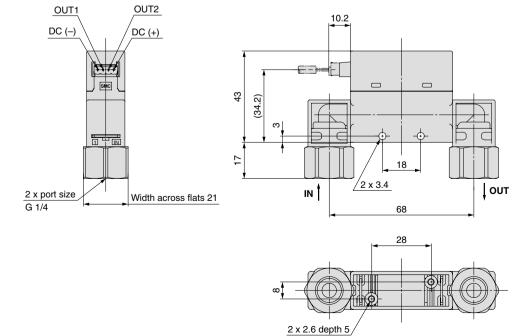


### Dimensions

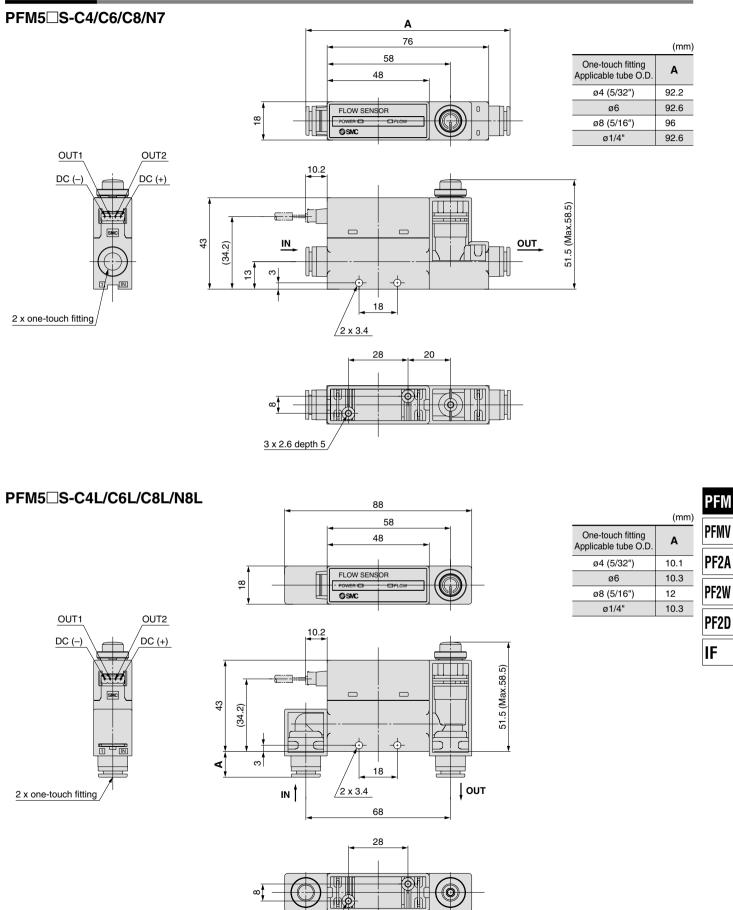



2 x 2.6 depth 5

### Dimensions

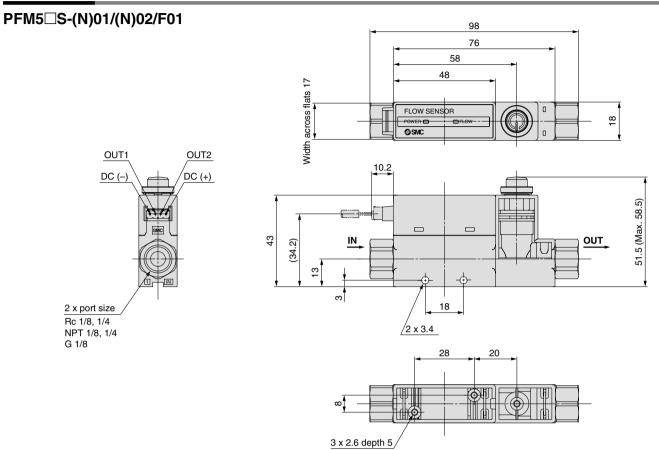

PFM5□S-(N)01L/(N)02L/F01L

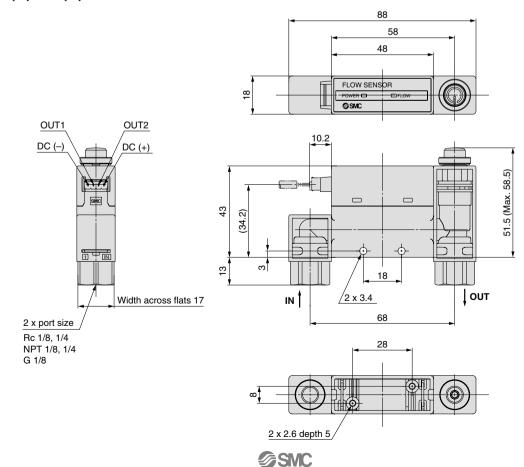

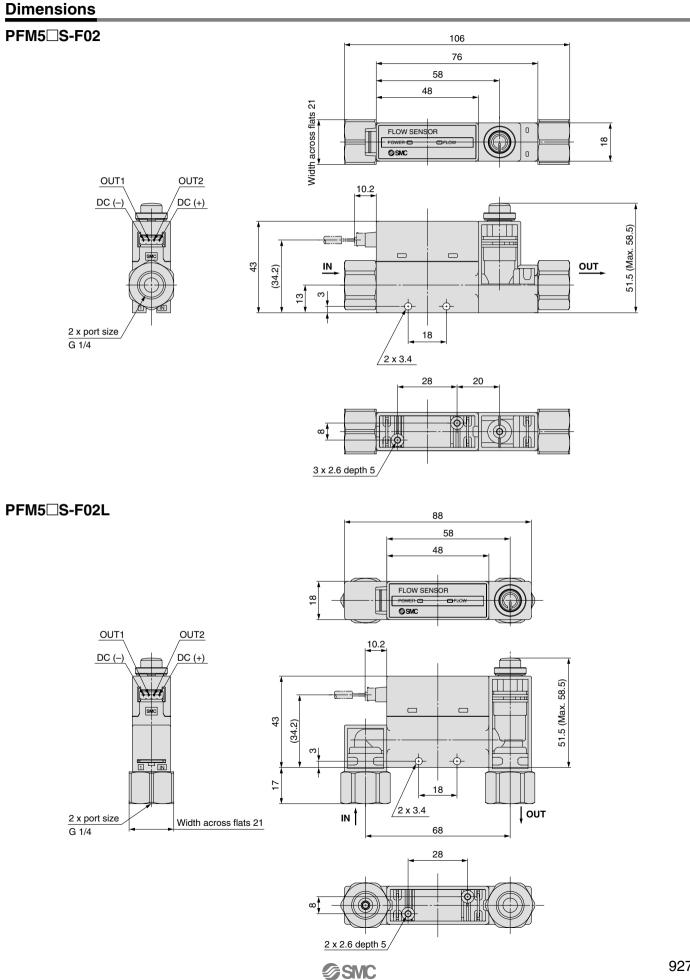

PFM

PFMV

PF2A


PF2W

PF2D


IF

### Dimensions


### Panel mount / Without flow adjustment valve / Straight

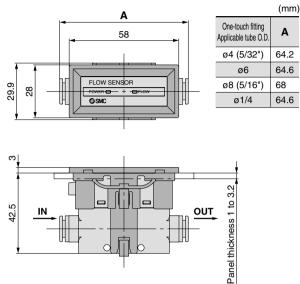

### Panel mount / Without flow adjustment valve

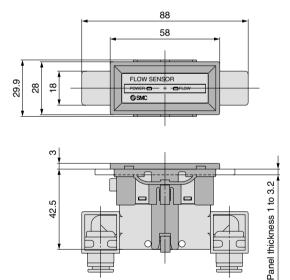


### **Panel Fitting Dimensions**

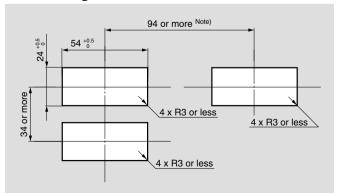


#### Panel thickness 1 to 3.2 mm

Note) Piping entry direction: Minimum dimensions for bottom side piping. If using straight piping, the piping material and tubing need to be taken into consideration when designing the system. If a bend (R) is used, limit it to R3 or less.

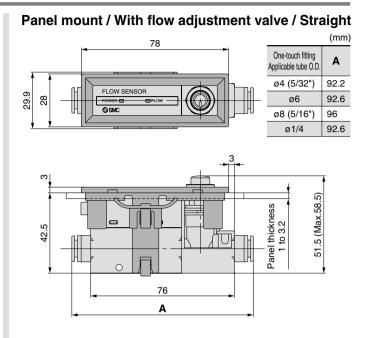


### Panel mount / With flow adjustment valve

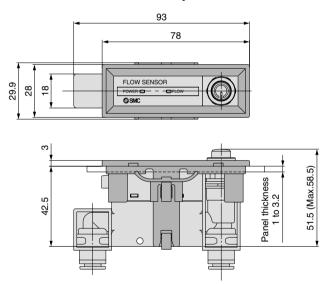

### **Panel Fitting Dimensions**

**SMC** 

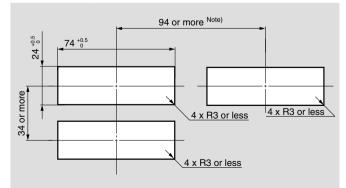


#### Panel thickness 1 to 3.2 mm


Note) Piping entry direction: Minimum dimensions for bottom side piping. If using straight piping, the piping material and tubing need to be taken into consideration when designing the system. If a bend (R) is used, limit it to R3 or less.

### Dimensions

### With bracket / Without flow adjustment valve

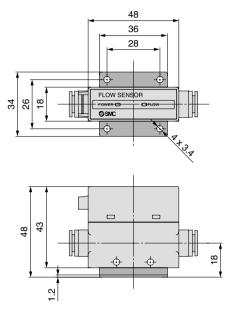


### **DIN rail mounting**

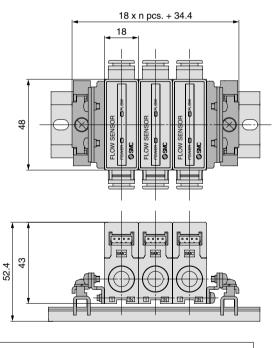


DIN rail (supplied by customers)
Port size, F02: G1/4 cannot be mounted on the DIN rail.

### With bracket / With flow adjustment valve

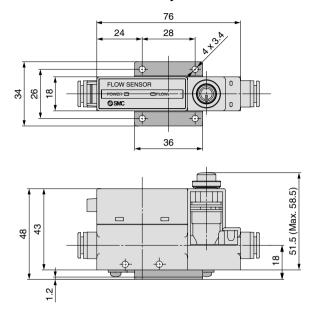

## Lead wire with connector ZS-33-D

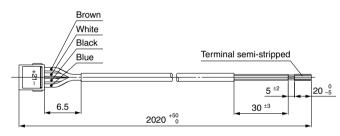

## Cable Specifications of Lead Wire with Connector


Rated temperature		80°C	
Rated voltage		30 V	
Number of wires		4	
Conductor	Nominal cross section area	AWG26	
	Material	Soft copper wire	
	Construction	28 / 0.08 mm	
	External diameter	Approx. 0.50 mm	
Insulation	Material	Cross-linked vinyl chloride resin compound	
	External diameter	Approx. 1.00 mm	
	Colors	Brown, White, Black, Blue	
Sheath	Material	Oil-resistant vinyl chloride resin compound	
	Color	Light gray	
Finished external diameter		ø3.5 <sup>+0.10</sup> -0.25	

\* Connects to the PFM3 = series.


## PFM PFMV PF2A PF2W PF2D

## Series PFM7/PFM5 Common Specifications


### Pressure Loss (Pressure: 350 [kPa])

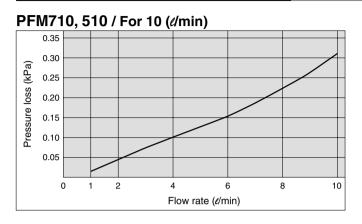


### PFM750, 550 / For 50 (dmin)

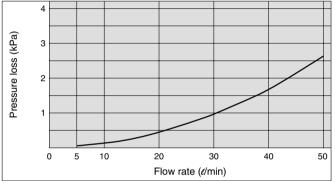


### Flow Characteristics

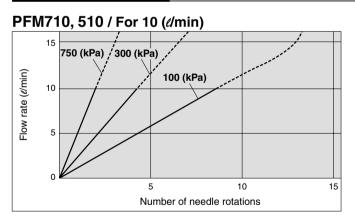


### PFM750, 550 / For 50 (*t*/min)

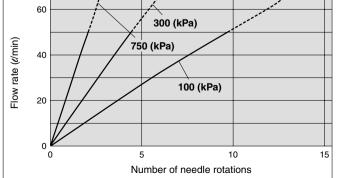


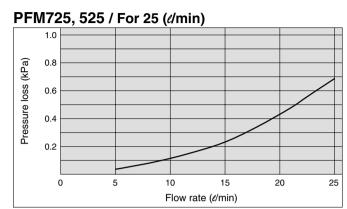


PFM711, 511 / For 100 (d/min)

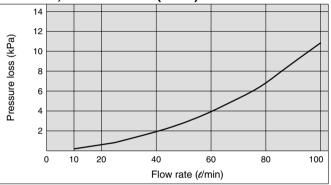


### PFM725, 525 / For 25 (d/min)

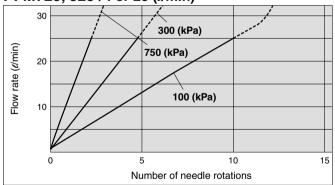




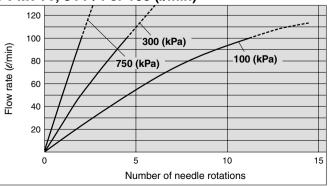

### Parts Description

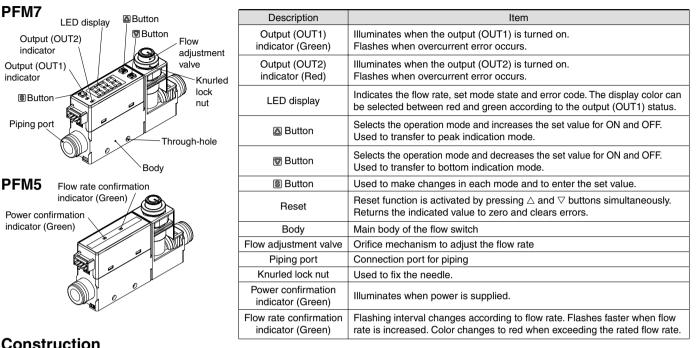

### Construction

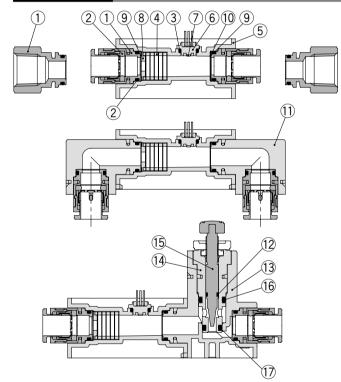

### Component Parts


Component Parts			
No.	Description	Material	Note
1	Fitting for piping	Brass	Electroless nickel plated
2	O-ring	FKM	Fluoro coated
3	O-ring	HNBR	Fluoro coated
4	Rectifying module	Stainless steel 304	
5	Body	PBT	
6	Sensor housing	LCP	
7	Sensor chip	Silicon	
8	Orifice	Brass	Electroless nickel plated
9	Seal	FKM	Fluoro coated
10	Mesh	Stainless steel 304	
11	Bottom piping adapter	PBT	
12	O-ring	HNBR	Fluoro coated
13	Flow adjustment valve assembly	PBT	
14	Body B	Brass	Electroless nickel plated
15	Needle	Brass	Electroless nickel plated
16	O-ring	HNBR	Fluoro coated
17	O-ring	HNBR	Fluoro coated

### **Detection Principle**

This MEMS sensor chip consists of upstream temperature measuring sensor (Ru) and downstream temperature measuring sensor (Rd), which are placed symmetrically from the center of a platinum thin film coated heater (Rh) mounted on a membrane, and an ambient temperature sensor (Ra) for measuring gas temperature.

The principle is as shown in the diagram on the right. (a) When the gas is static, the temperature distribution of heated gas centered around Rh is uniform, and Ru and Rd have the same resistance. (b) When the gas flows from the left side, it upsets the balance of the temperature distribution of heated gas, and the resistance of Rd becomes greater than that of Ru.

The difference in resistance between Ru and Rd is proportional to the gas velocity, so measurement and analysis of the resistance can show the flow direction and velocity of the gas. Ra is used to compensate the gas and/or ambient temperature.

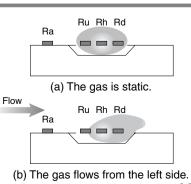

931

PFM

PFMV

PF2A

PF2W

PF2D

IF


## Series **PFM7/PFM5**

### **Component Parts**

No.	Descriptio	n	Model		Straid	ght piping
1	Body					, FF 3
2	Lead wire with connector	r (2 m)	ZS-33-D			
3 IN side Bottom piping adapter (with pin)		ZS-33-P1L				
4	OUT side Bottom piping a		ZS-33-P2L			
	For straight piping	For 10 d/min	ZS-33-10N			
5	Flow adjustment valve	For 25 d/min	ZS-33-25N	$\overline{7}$		
5	assembly	For 50 <i>(</i> /min	ZS-33-50N			<b>(4)</b>
	(with pin)	For 100 d/min	ZS-33-11N	8		Bottom piping
	For bottom piping	For 10 <i>d</i> min	ZS-33-10NL			
6	Flow adjustment valve	For 25 <i>(</i> /min	ZS-33-25NL			
0	assembly	For 50 <i>d</i> min	ZS-33-50NL			
	(with pin)	For 100 d/min	ZS-33-11NL			
		ø4 (5/32")	ZS-33-C4			
7	One-touch fitting	ø6	ZS-33-C6	1		
'		ø8 (5/16")	ZS-33-C8	(3)		
		ø1/4"	ZS-33-N7		8 (5)	
		Rc 1/8	ZS-33-01			(7)
		NPT 1/8	ZS-33-N01		Í	Ba : Ad
8	Female thread	G 1/8	ZS-33-F01			
Ū		Rc 1/4	ZS-33-02			
		NPT 1/4	ZS-33-N02			
		G 1/4	ZS-33-F02	(8)		
				C		
				Straight piping with		
				flow adjustment valve	r 🖉	
				•		
						9
						×(7)
				Bottom piping		
				flow adjustme	nt valve	V
				7		

# Flow Sensor Monitor Series PFM3



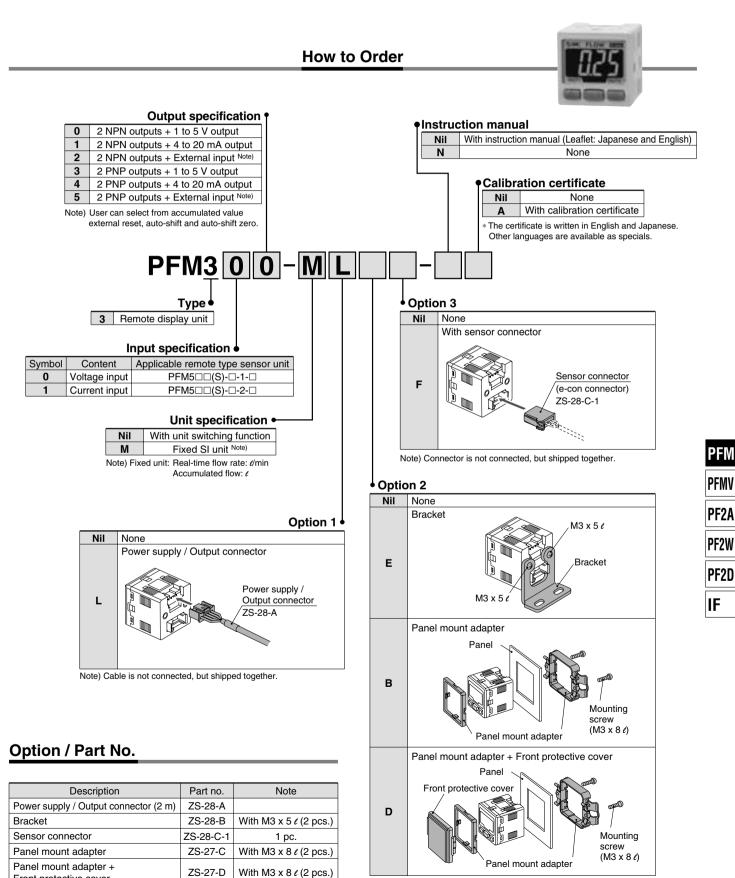

**SMC** 

Front protective cover

Note) Options are not assembled, but shipped together.

### Specifications


Model		PFM3□□					
Rated flow range Dry air, N <sub>2</sub> , Ar		0.2 to 10 t/min 0.5 to 25 t/min 1 to 50 t/min 2 to 100 t/min					
(Flow rate range)	CO <sub>2</sub>	0.2 to 5 <i>t</i> /min	0.5 to 12.5 <i>t</i> /min	1 to 25 <i>t</i> /min	2 to 50 <i>t</i> /min		
Note 1) Displayable range	Dry air, N <sub>2</sub> , Ar	0.2 to 10.5 <i>(</i> /min	0.5 to 26.3 <i>t</i> /min	1 to 52.5 <i>(</i> /min	2 to 105  //min		
	CO <sub>2</sub>	0.2 to 5.2 <i>t</i> /min	0.5 to 13.1 //min	1 to 26.2 <i>t</i> /min	2 to 52 <i>t</i> /min		
Settable range Note 1)	Dry air, N₂, Ar	0 to 10.5 <i>t</i> /min	0 to 26.3 //min	0 to 52.5 <i>t</i> /min	0 to 105 <i>t</i> /min		
	CO <sub>2</sub>	0 to 5.2 <i>t</i> /min	0 to 13.1 //min	0 to 26.2 <i>t</i> /min	0 to 52 <i>t</i> /min		
Minimum unit setting	Note 2)	0.01 <i>t</i> /min	0.1 <i>t</i> /min	0.1 <i>t</i> /min	0.1 <i>t</i> /min		
Accumulated pulse flow ra	ate exchange value	0.1 <i>t</i> /pulse	0.1 <i>t</i> /pulse	0.1 <i>t</i> /pulse	1 <i>t</i> /pulse		
Indication unit Note 3)		Real-time flow rate $\ell$ /min, CFM x 10 <sup>-2</sup> Accumulated flow $\ell$ , ft <sup>3</sup> x 10 <sup>-1</sup>					
Accumulated flow ran	nge Note 4)	1999999 <i>t</i>					
Power supply voltage		24 VDC (ripple $\pm$ 10% or less) (With polarity protection)					
Current consumption		50 mA or less					
Sensor input Number of inputs: 1		PFM30 $\square$ : Voltage input 1 to 5 VDC (input impedance: 1 M $\Omega$ ) PFM31 $\square$ : Current input 4 to 20 mADC (input impedance: 250 $\Omega$ )					
Hysteresis Note 5)		Hysteresis mode: Variable, Window comparator mode: Variable					
Switch output		NPN or PNP open collector output: 2 outputs Maximum load current: 80 mA, max. load voltage 30 VDC (at NPN output), Residual voltage 1 V or less (at load current 80 mA), With short-circuit protection					
Accumulated pulse output		NPN or PNP open collector output (Same as switch output)					
Response time		1 s (50 ms, 0.5 s, 2 s can be selected.)					
Repeatability		±0.1%F.S. or less, Analog output accuracy: ±0.3%F.S. or less					
Analog output		Voltage output: 1 to 5 VDC (0 <i>l</i> /min to max. rated flow rate value) Output impedance: Approx. 1 kΩ, Accuracy: ±1%F.S. or less (relative to display value) Current output: 4 to 20 mADC (0 <i>l</i> /min to max. rated flow rate value) Max. load impedance: 600 Ω (at 24 VDC), Min. load impedance: 50 Ω Accuracy: ±1%F.S. or less (relative to display value)					
Display accuracy		±0.5%F.S. ± 1 digit or less					
Display method		3+1/2-digit, 7-segment LED 2-color display (Red/Green) Sampling cycle: 10 times/sec					
Status LED's		OUT1: Illuminates when output is turned ON (Green). OUT2: Illuminates when output is turned ON (Red).					
External input Note 6)		No-voltage input (Reed or Solid state), LOW level input 30 msec or more, LOW level 0.4 V or less					
Enclosure		IP40					
Operating temperature range		Operating: 0 to 50°C Stored: -10 to 60°C (with no freezing and condensation)					
Operating humidity range		Operating, Stored: 35 to 85%R.H. (with no condensation)					
Withstand voltage		1000 VAC for 1 min. between whole charging part and live part					
Insulation resistance		50 $\text{M}\Omega$ or more (500 VDC Mega) between whole charging part and live part					
Vibration resistance		10 to 150 Hz with a 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration, in each X, Y, Z direction for 2 hrs, whichever is smaller. (de-energized)					
. Bration resistance	Impact resistance		100 m/s <sup>2</sup> in X, Y, Z directions 3 times each(de-energized)				
		±0.5%F.S. or less (based on 25°C)					
	eristics			(			
Impact resistance	eristics	Power suppl	y / Output connection: 5P cor	, ,	IP connector		
Impact resistance Temperature characte	eristics	Power suppl	y / Output connection: 5P cor	, ,	IP connector		

Note 1) Select the sensor to connect in the initial setting. If CO<sub>2</sub> is selected as the operating fluid, the value is 1/2 on the maximum side. Note 2) When 10 *d*/min with a minimum unit setting of 0.01 *d*/min is selected for the connected sensor, the upper limit of the display range is 10.50 *d*/min. When 100 *d*/min with a minimum unit setting of 0.1 *d*/min is selected for the connected sensor, the upper limit of the display range is 105.0 *d*/min.

The setting at the time of shipment is 10 //min with a minimum unit setting of 0.1 //min for the connected sensor. Note 3) When equipped with a unit switching function. (The SI unit (//min or /) is fixed for types with no unit switching function.) Note 4) The accumulated flow value is cleared to 0 when power is turned of f. It is possible to select function that holds the accumulated flow value so it is not cleared. (The accumulated flow value can be held at 2- or 5-minute intervals.) The service life of the memory element (electronic component) is limited to 1 million overwrite cycles (assuming 24-hour operation, 5 minutes x 1 million cycles = 5 million minutes = 9.5 years) when 5-minute intervals are selected. Therefore, when using the holding function, calculate the service life based on the usage conditions, and use the switch within the service life. Applies to models equipped with a unit switching function. (The Si unit (d/min or c) is fixed for types with no unit switching function.)

Note 5) Set to hystresis mode at the time of shipment from the factory. Can be changed to window comparator mode using push-buttons. Note 6) Accumulated external reset function at the time of shipment from the factory. Auto-shift or auto-shift zero function can be selected using push-buttons.

Analog Output Note: Analog output at maximum rated flow rate when CO2 is selected is 3 [V] for the voltage output type and 12 [mA] for the current output type.

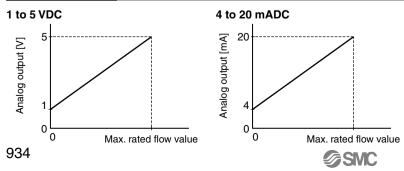


Rated flow range	Max. rated flow value [ℓ/min]	
0.2 to 10 <i>t</i> /min	10 (5)	
0.5 to 25 <i>t</i> /min	25 (12.5)	
1 to 50 <i>t</i> /min	50 (25)	
2 to 100 <i>t</i> /min	100 (50)	

\* ( ): Fluid: CO2

## Internal Circuits


### PFM3□0

NPN open collector output: 2 outputs Max. 30 V, 80 mA, residual voltage 1 V or less Analog output: 1 to 5 V Output impedance: approx. 1 k $\Omega$ 

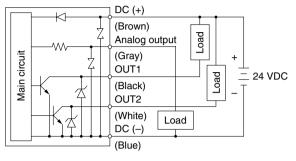


### PFM3□1

NPN open collector output: 2 outputs Max. 30 V, 80 mA, residual voltage 1 V or less Analog output: 4 to 20 mA Max. load impedance: 300  $\Omega$  (12 VDC) 600  $\Omega$  (24 VDC) Min. load impedance: 50  $\Omega$ 

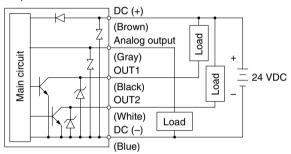


### PFM3□2

NPN open collector output with external input: 2 outputs Max. 30 V, 80 mA, residual voltage 1 V or less

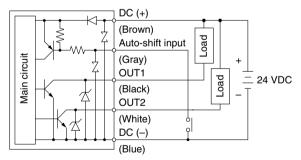


## Accumulated pulse output wiring example

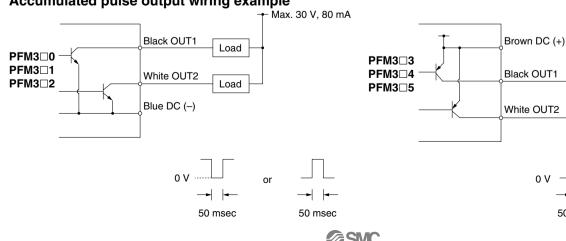


### PFM3□3

PNP open collector output: 2 outputs Max. 80 mA, residual voltage 1 V or less Analog output: 1 to 5 V Output impedance: approx. 1 k $\Omega$ 

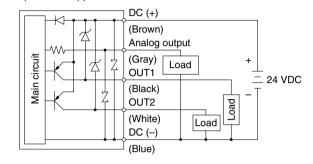


## PFM3□4

PNP open collector output: 2 outputs Max. 80 mA, residual voltage 1 V or less Analog output: 4 to 20 mA Max. load impedance: 300  $\Omega$  (12 VDC) 600  $\Omega$  (24 VDC) Min. load impedance: 50  $\Omega$ 

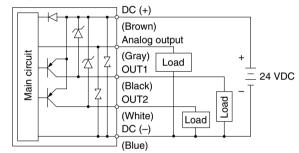

### PFM3□5

PNP open collector output with external input: 2 outputs Max. 80 mA, residual voltage 1 V or less

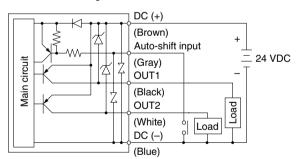

Load

Load

→ | ◄

50 msec

Max. 80 mA

▶ | ◄

50 msec 935

or

PFM

PFMV

PF2A

PF2W

PF2D

IF

## Series **PFM3**

## **Descriptions**

#### LCD Display

Shows the current flow rate, mode setting, selected display unit, and error code. Four display modes are available, some of which use indications that are fixed either red or green, and others use indications that change from green to red.

Output (OUT1) Indicator (Green)

Lights when the output (OUT1) is turned on.

#### △ Button

Used for mode selection and increasing the  $\mathsf{ON}/\mathsf{OFF}$  setting value. Also used to switch to peak display mode.



### Output (OUT2) Indicator (Red)

Lights when the output (OUT2) is turned on.

#### SET Button


Used to activate mode changes and new setting values.

#### $\nabla$ Button

Used for mode selection and decreasing the ON/OFF setting value. Also used to switch to bottom display mode.

## Flow Sensor Monitor Series PFM3

## Dimensions

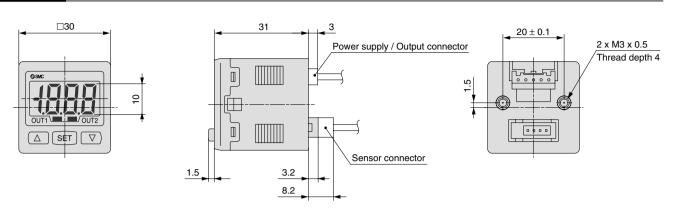



## Sensor connector (ZS-28-C-1)


Terminal name	
DC (+)	
N.C.	1
DC (-)	3 4
IN*	
	DC (+) N.C. DC (-)

\* 1 to 5 V or 4 to 20 mA


### With bracket

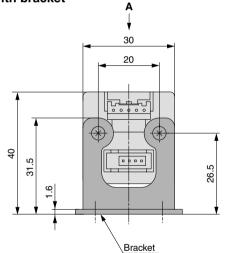

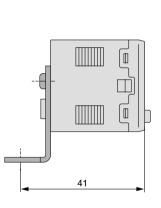


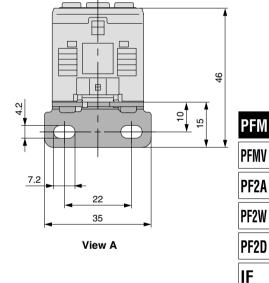

## With panel mount adapter

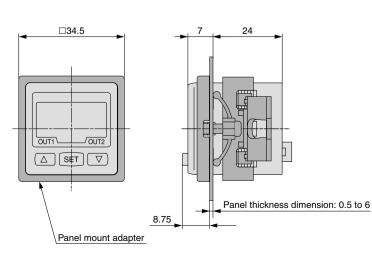

## With panel mount adapter + Front protective cover

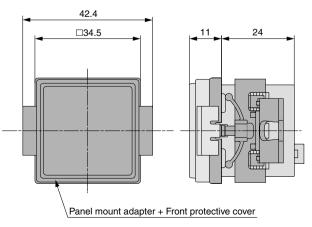




## Series **PFM3**


### Dimensions

### Panel fitting dimensions

Secure mounting of n (2 or more) switches (horizontal)

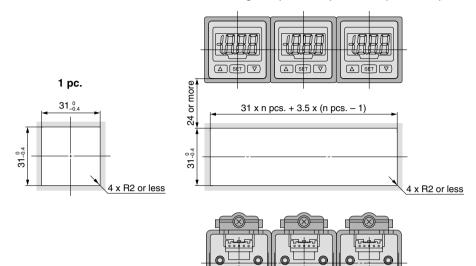


### Secure mounting of n (2 or more) switches (vertical)

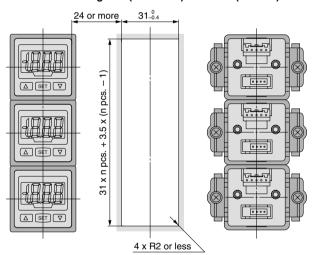

Note) If a bend (R) is used, limit it to R2 or less.

**SMC** 

### Power supply / Output connector (ZS-28-A)

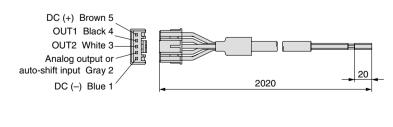

#### **Cable Specifications**

Cable .	Specifications		
Rated te	emperature	105°C	
Rated v	oltage	300 V	
Number	of wires	5	
	Nominal cross section area	0.2 mm <sup>2</sup>	
Con-	Material	Soft copper wire	
ductor	Construction	40 / 0.08 mm	
External diameter		0.58 mm	
Material		Cross-linked vinyl chloride resin compound	
Insula- External diameter		Approx. 1.12 mm	
tion Standard thickness		0.27 mm	
Colors		Brown, Black, White, Gray, Blue	
	Material	Oil-resistant vinyl chloride resin compound	
Sheath	Standard thickness	0.5 mm	
	Color	Light gray (Munsell N7)	
Finished	d external diameter	ø4.1	



### Output operation

The output operation can be selected from the following:

Output (hysteresis mode and window comparator mode) corresponding to real-time flow rate,

Output corresponding to accumulated flow,

Accumulated output pulse output

At the time of shipment from the factory, it is set to hysteresis mode and normal output.

#### Indication color

The indication color can be selected for each output condition. The selection of the indication color provides visual identification of abnormal values. (The indication color depends on OUT1 setting.)

Green for ON, Red for OFF		
Red for ON, Green for OFF		
Red all the time		
Green all the time		

Dry air, N2

Argon

CO<sub>2</sub>

#### Selection of operating fluid

The fluid can be selected. If argon (Ar) or carbon dioxide (CO<sub>2</sub>) is used, the setting needs to be changed.

Note) When CO2 is selected, the upper limit of the measured flow rate range will be 1/2 of that for other fluids.

#### Selection of indication unit reference

The indication unit reference can be selected between standard conditions and normal conditions.

Standard conditions: Flow rate converted to a volume at 20°C and 1atm (atmosphere)
Normal conditions: Flow rate converted to a volume at 0°C and 1atm (atmosphere)

#### Setting of response time

The flow rate may change momentarily during transition between ON (open) and OFF (closed) of the valve. It can be set so that this momentary change is not detected.

0.05 sec.	
0.5 sec.	
1 sec.	
2 sec.	

<Principle> When the switch has been in ON area for a set period of time, the output will turn on (or off).

#### Indication mode

The indication mode can be selected between real-time flow rate and accumulated flow.

Real-time flow rate display Accumulated flow display

### External input function

The external input function can be selected from accumulated value external reset, auto-shift and auto-shift zero.

(Input signal: Connect input line to GND for 30 ms or more.)

- External reset: This function resets the accumulated value to "0" when an input signal is applied.
- Auto-shift: This function generates an output corresponding to the change in relation to real-time flow rate when an input signal is applied.
- Auto-shift zero: This function displays real-time flow rate as "0" when a positive input signal is applied in the auto shift function described above.

Set values and flow rates that are relatively on the negative side are expressed by illumination of the decimal point on the far left.

#### Indication resolution

The indication resolution of the PFM710 and 711 series can be changed to enable values to be indicated in smaller steps.

100 resolution	PFM710 PFM711	by 0.1 <i>t</i> /min by 1 <i>t</i> /min
1000 resolution	PFM710 PFM711	by 0.01 <i>t</i> /min by 0.1 <i>t</i> /min

#### Accumulated value hold

Accumulated value is not cleared even when the power supply is turned off.

The accumulated value is memorized every 2 or 5 min. during measurement, and continues from the last memorized value when the power supply is turned on again.

The life time of the memory element is 1 million access cycles. Take this into consideration before using this function.

### Selection of analog output filter

This selection is available when using a product with an analog output.

A signal with fast response speed can be generated by turning off the analog output filter.

#### Selection of power-saving mode

The power-saving mode can be selected.

With this function, if no buttons are pressed for 30 sec., it shifts to power-saving mode.

At the time of shipment from the factory, the product is set to the normal mode (the power-saving mode is turned off).

(When power-saving mode is activated, the decimal point flashes.)

#### Setting of secret code

The user can select whether a secret code must be entered to release key lock.

At the time of shipment from the factory, it is set such that the secret code is not required.

#### Peak/Bottom value indication

The maximum (minimum) flow rate is detected and updated from when the power supply is turned on. In peak (bottom) value indication mode, this maximum (minimum) flow rate is displayed.

#### Keylock function

Prevents operation errors such as accidentally changing setting values.

#### Zero clear function

Allows the user to adjust the measured flow rate indication to zero. The adjustment range is  $\pm 7\%$ F.S. of the initial factory setting.

### Error indication function

When an error or abnormality arises, the location and contents are displayed.


Description	Contents	Action	PF
Flow rate	The flow rate exceeds the upper limit of indicated flow rate	Decrease the flow rate.	PFN
error	range. There is a reverse flow equiv-	Turn the flow to correct	PF2
	alent to -5% or more.	direction.	PF2
	Load current of 80 mA or more is applied to the switch	Eliminate the cause of	
Overcurrent	output (OUT1).	the overcurrent by turn- ing off the power supply	PF2
error	Load current of 80 mA or more is applied to the switch	and then turn on it again.	IF
	output (OUT2).		
System	Possibility of internal circuit damage before factory adjust- ment.	Stop operation imme- diately and contact SMC.	
error	System error. Possibility of data memorizing failure or in- ternal circuit damage.	Reset the unit, and carry out all settings again.	
Zero clear error	If zero clear is performed (by holding down and but- tons simultaneously for 1 sec.) while there is some flow, "Er4" will be displayed for 1 sec.		
Flow rate error	The flow rate exceeds the ac- cumulated flow rate range.	Clear the accumulated flow rate. (This error does not matter when the accumulated flow rate is not being used.)	

If the error or abnormality cannot be solved by the action above, please contact SMC for further investigation.

## Series **PFM7/PFM5** Made to Order 1

Please contact SMC for detailed specifications, lead times and prices.

## Changing the piping entry direction combination for IN and OUT side

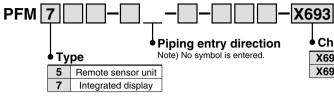

## Changing the piping entry direction combination

Made to Order

X693 IN side: Straight / OUT side: Bottom


X694 IN side: Bottom / OUT side: Straight

For details of How to Order, refer to page 906 and 918.


Symbol

X693, X694

## Dimensions

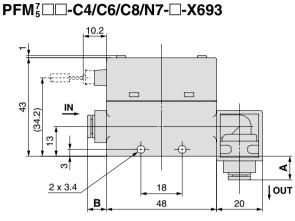


## PFM<sup>7</sup><sub>5</sub> - C4/C6/C8/N7- - X694

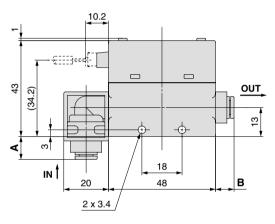


	One-touch fitting Applicable tube O.D.		в
C4	ø4 (5/32")	10.1	8.1
C6	ø6	10.3	8.3
C8	ø8 (5/16")	12	10
N7	ø1/4	10.3	8.3



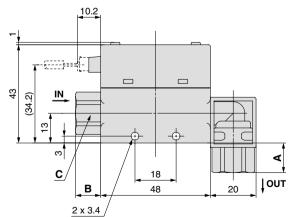

## **PFM**<sup>7</sup><sub>5</sub> **D**-**D**01/02-**D**-X694

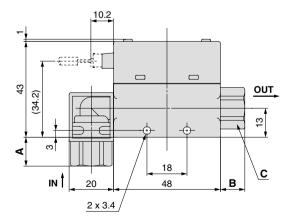


Port size	А	в	<b>C</b> (Width across flats)
Rc 1/8, 1/4 NPT 1/8, 1/4 G 1/8	13	11	17
G 1/4	17	15	21

## Series PFM7/PFM5






## Dimensions

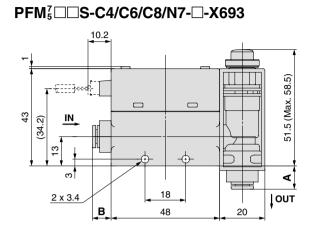


One-touch fitting Applicable tube O.D.	Α	В
ø4 (5/32")	10.1	8.1
ø6	10.3	8.3
ø8 (5/16")	12	10
ø1/4	10.3	8.3
Ø 1/4	10.3	8.3

## PFM<sup>7</sup><sub>5</sub> S-C4/C6/C8/N7--X694

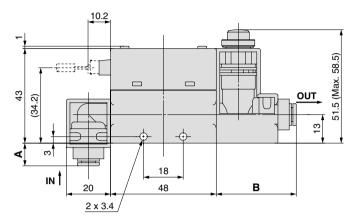


Α	В
10.1	36.1
10.3	36.3
12	37
10.3	36.3
	10.1 10.3 12

### **PFM**<sup>7</sup><sub>5</sub>□□**S**-□01/02-□-X693

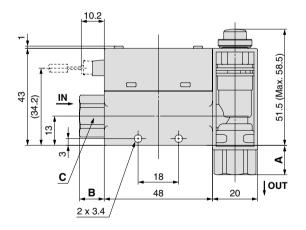

Port size	А	В	<b>C</b> (Width across flats)
Rc 1/8, 1/4 NPT 1/8, 1/4 G 1/8	13	11	17
G 1/4	17	15	21

### PFM<sup>7</sup><sub>5</sub>□□S-□01/02-□-X694

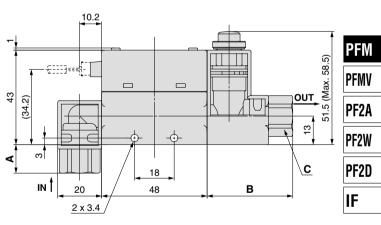

Port size	А	В	<b>C</b> (Width across flats)	
Rc 1/8, 1/4 NPT 1/8, 1/4 G 1/8	13	39	17	
G 1/4	17	43	21	

# Series PFM7/PFM5


Made to Order 3



Please contact SMC for detailed specifications, lead times and prices.

## Compatibility with argon (Ar) and carbon dioxide (CO<sub>2</sub>) mixed gas

The argon–carbon dioxide gas ratio (Ar:  $CO_2$ ) can be selected using the push-buttons from among the following: 92 : 8, 90 : 10, 80 : 20, 70 : 30, and 60 : 40. Dimensions are same as those of standard models.

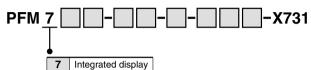


For details of How to Order, refer to page 906 and 918.

Symbol

X731

Model	Gas ratio		Rated flow range	Displayable range	Settable range	Max. analog output		
	Ar	CO <sub>2</sub>	naleu ilow fallge		Seliable fallye	Voltage (Vmax)	Current (Imax)	
	92%	8%		0.2 to 7.4 //min		3.80 V	15.2 mA	
	90%	10%			0 to 7.4 <i>(</i> /min			
PFM710	80%	20%	0.2 to 7.0 <i>(</i> /min					
	70%	30%						
	60%	40%						
	92%	8%	0.5 to 25.0 <i>(</i> /min	0.5 to 26.3 ℓ/min	0 to 26.3 //min	5.00 V	20.0 mA	
	90%	10%	0.5 to 25.0 @min	0.5 10 20.3 6/1110	0 10 20.3 Ømin			
PFM725	80%	20%			0 to 21.0 <i>t</i> /min	4.20 V	16.8 mA	
	70%	30%	0.5 to 20.0 e/min	0.5 to 21.0 <i>t</i> /min				
	60%	40%						
	92%	8%	1.0 to 50.0 <i>e</i> /min	1.0 to 52.5 //min	0 to 52.5 d/min	5.00 V	20.0 mA	
	90%	10%	1.0 to 50.0 amin	1.0 to 52.5 @mm	0 10 52.5 011111			
PFM750	80%	20%		1.0 to 42.0 <i>t</i> /min	0 to 42.0 <i>t</i> /min	4.20 V	16.8 mA	
	70%	30%	1.0 to 40.0 <i>t</i> /min					
	60%	40%						
	92%	8%	0 to 100 //mir		0 to 105 ∉/min	5.00 V	20.0 mA	
	90%	10%	2 to 100 <i>t</i> /min	2 to 105 <i>t</i> /min	0.00105@min	5.00 V		
PFM711	80%	20%	2 to 90 <i>t</i> /min	2 to 95 <i>t</i> /min	0 to 95 <i>t</i> /min	4.60 V	18.4 mA	
	70%	30%	0 to 00 design	2 to 84 <i>¢</i> /min	0 to 84	4.20 V	16.8 mA	
	60%	40%	2 to 80 <i>t</i> /min	2 10 04 Ø/MIN	0 10 64 Ømin			

### Output characteristics using mixed gas

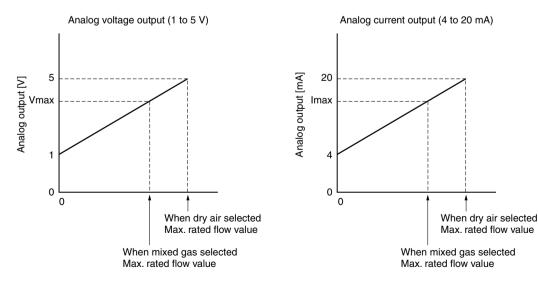



Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 892 to 896 for Flow Switch Precautions.

### **Design and Selection**

## **M** Warning

1. Operate the switch only within the specified voltage.

Use of the switch outside of the specified voltage range can cause not only a malfunction and damage to the switch, but it can also cause electrocution and fire.

2. Do not exceed the maximum allowable load specification.

A load exceeding the maximum load specification can cause damage to the switch.

3. Do not use a load that generates surge voltage.

Although surge protectiion is installed in the circuit at the output side of the switch, damage may still occur if a surge is applied repeatedly. When working directly such an unit as relay, solenoid valve, etc., which generates surge, use a built-in surge absorbing element type.

### 4. Be sure to verify the applicable fluid.

The switches do not have an explosion proof rating. To prevent possible fire hazard, do not use with flammable gases or fluids.

### 5. Monitor the internal voltage drop of a switch.

When operating below the specified voltage, it is possible that a load may be ineffective, even though the pressure switch function is normal. Therefore, the formula below should be satisfied after confirming the voltage of the load.

Supply _ Internal voltage > voltage drop of switch	Minimum operating voltage of load	
--	-----------------------------------	--

6. Use the switch within the specified flow rate measurement and operating pressure.

Operating beyond the specified flow rate and operating pressure can damage the switch.

7. Never use flammable fluids and/or permeable fluids.

They may cause a fire, an explosion or corrosion.

\* Refer to the MSDS (Material Safety Data Sheet) when using chemicals.

- 8. To prevent damage due to failure and/or malfunction of the product, establish a backup system such as a fail-safe system which enables multiple-stage type operation of the equipment and machinery.
- 9. When the product is for an interlock circuit, the following points should be noted.
  - Provide double interlocking through another system (mechanical protection function, etc.).
  - Perform checks to ensure the product is operating properly, as there is a risk of injury.

## **A** Caution

1. Ensure sufficient space for maintenance activities.

Provide space required for maintenance.

- 2. The direct-current power supply to combine should be UL authorized power supply.
  - (1) Limited voltage current circuit in accordance with UL 508. A circuit in which power is supplied by the secondary coil of a transformer that meets the following conditions.
    - Maximum voltage (with no load):
    - 30 Vrms (42.4 V peak) or less
    - Maximum current:
    - (1) 8 A or less (including when short circuited)
    - (2) limited by circuit protector (such as fuse) with the following ratings.

No load voltage (V peak)	Max. current rating		
0 to 20 [V]	5.0		
	100		
Above 20 to 30 [V]	Peak voltage		

(2) A circuit using max. 30 Vrms or less (42.4 V peak), which is powered by UL 1310 compatible Class-2 power supply or UL 1585 compatible Class-2 transformer (Class-2 circuit).

## 3. Data of the switch are stored even after the power supply is turned off.

Input data is stored in an EEPROM so that the data will not be lost after the flow switch is turned off. (The data can be rewritten for up to one million times, and stored for up to 20 years.)

Mounting

## \land Warning

- **1. Monitor the flow direction of the fluid.** Install and connect piping so that fluid flows in the direction of the arrow indicated on the body.
- 2. Remove dirt and dust from inside of the piping by means of air blow, before attaching to the switch.
- 3. Do not drop or bump.

Do not drop, bump, or apply excessive impacts (490 m/s<sup>2</sup>) while handling. Although the external body of a switch (switch case) may not be damaged, the switch inside could be damaged and cause a malfunction.

4. Hold the body of the switch when handling.

The tensile strength of the cord is 49 N and applying a greater pulling force than this can cause a malfunction. When handling, hold the body of the switch.

5. Do not use until you can verify that equipment can operate properly.

Following mounting, repair, or retrofit, verify correct mounting by conducting suitable function and leakage tests after piping and power connections have been made.

- 6. Never mount the switch in a place that will be used as a scaffold during piping.
- 7. Apply a wrench only to the metal part of the piping when installing the flow switch in the system piping.

There is a risk of breakage of the switch.



PFM
PFMV
PF2A
PF2W
PF2D
IF



Be sure to read before handling. Refer to front matters 58 and 59 for Safety I

Refer to front matters 58 and 59 for Safety Instructions and pages 892 to 896 for Flow Switch Precautions.

Mounting


## **A**Caution

- **1. Observe the proper tightening torque.** When the switch is tightened beyond the specified tightening torque, the switch may be damaged.
- 2. Do not mount the switch in a place that will be used as a scaffold.


The switch could break if subjected to excessive load such as being accidentally stepped on.

3. Use a tapping screw (P-tite) with nominal diameter of 3 to mount the product by using the bracket mounting hole(s) at the bottom.

The length of the screw depends on the thickness of the plate to be fixed. Please select a screw whose length is the thickness of the plate + 4.8 mm. (The hole depth is 5 mm.)

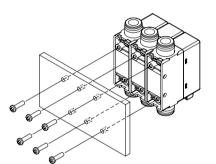

4. When fixing the switch with screws using mounting holes, use a tightening torque of 0.3 N⋅m or less. If necessary, tighten the product to prevent it from loosening.

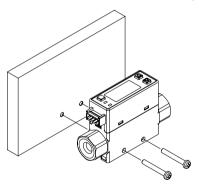

### Wiring

## **M** Warning

1. Verify the color and the terminal number when wiring.

Incorrect wiring can cause the switch to be damaged and malfunction. Verify the color and the terminal number in the instruction manual when wiring.

2. Use caution not to repeatedly apply bending or stretching forces to the lead wire.

Repeated pulling or bending of the lead wire may cause some of the wires to break.

Wiring

## **M** Warning

## 3. Confirm proper insulation of wiring.

Make sure that there is no faulty wiring insulation (contact with other circuits, ground fault, improper insulation between terminals, etc.). Damage may occur due to excess current flow into a switch.

4. Do not wire in conjunction with power lines or high voltage lines.

Wire separately from power lines and high voltage lines, and avoid wiring in the same conduit with these lines. Control circuits, including switches, may malfunction due to noise from these lines.

### 5. Do not short-circuit a load.

Although the switch displays an overcurrent error if a load is shortcircuited, there is not protection against incorrect wiring (power source polarity, etc.). Use caution to avoid wiring incorrectly.

6. Do not connect wiring while energizing the product.

The switch and any equipment connected to it could break and malfunction.

## **Operating Environment**

## \land Warning

- **1. Never use in the presence of explosive gases.** The switch does not have an explosion proof construction. If it is used in an environment where explosive gases are used, it may cause an explosive disaster. Therefore, never use it in such an environment.
- 2. Mount the switch in a location where there is no vibration greater than 98 m/s<sup>2</sup>, or no impact greater than 490 m/s<sup>2</sup>.

With a switch with orifice, the adjusted flow rate value could be affected by vibration.

- **3.** Do not use in an area where surges are generated. When there are units that generate a large amount of surge in the area around a pressure switch, (e.g., solenoid type lifters, high frequency induction furnaces, motors, etc.) this may cause deterioration or damage to the switch's internal circuitry. Avoid sources of surge generation and crossed lines.
- 4. Switches are not equipped with surge protection against lightning.

The flow switches are CE compliant; however, they are not equipped with surge protection against lightning. Lightning surge protection measures should be applied directly to system components as necessary.

5. Avoid using the switch in an environment where the likelihood of splashing or spraying of liquids exists.

The switch is an open type and should not be used in an environment exposed to splashing of water and oil.

6. Do not use the product in an environment subject to a temperature cycle. If the product is subject to a temperature cycle other than natural changes in air temperature, the internal components of the

ral changes in air temperature, the internal components of the switch could be adversely affected. **Do not mount the product in locations where** 

7. Do not mount the product in locations where it is exposed to radiant heat.

This could result in damage and/or malfunction.





Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 892 to 896 for Flow Switch Precautions.

Maintenance

## **M** Warning

1. Perform periodical inspections to ensure proper operation of the switch.

Unexpected malfunctions may cause possible danger.

2. Take precautions when using the switch for an interlock circuit.

When a pressure switch is used for the interlock circuit, devise a multiple interlock system to prevent trouble or malfunction, and verify the operation of the switch and interlock function on a regular basis.

3. Do not make any modifications (including exchanging the printed circuit boards) to the product.

It may cause human injuries and damage.

- 4. When maintenance work is performed, the following points should be noted.
  - Turn off the power supply.
  - Cut off the fluid supply, drain the fluid from the piping and ensure the fluid is released to atmosphere before carrying out maintenance. Otherwise, it could cause injury.

## **A** Caution

1. Do not wipe the product with chemicals such as benzene or thinner.

Such chemicals could damage the product.

2. The accuracy could change by 2 to 3% when the piping is removed or replaced.

The repeatability accuracy is  $\pm 1\%$  F.S. when piping is replaced with piping of the same size. However, the accuracy could change by 2 to 3% if the size is different or when changing from straight to elbow or from elbow to straight piping.

3. Do not poke the inside of the piping port with a stick.

The rectifier could break, making the product unable to sustain the desired performance.

4. Do not touch terminals or connectors when energizing the product.

It could cause electric shock, malfunction, or damage to the switch.

Fluid

## **Warning**

1. Check regulators and flow adjustment valves before introducing the fluid.


If pressure or flow rate beyond the specified range are applied to the switch, the sensor unit may be damaged.

- 2. Install a filter on the inlet side when there is a possibility of foreign matter being mixed with the fluid.
- 3. Use dry air of quality compliant with JIS B 8392-1 1.1.2 to 1.6.2: 2003 for this product.


If any mist or drainage present in the air attaches to the product, accurate measurement could be prevented. Also, the accuracy of the product could be degraded.

### **Recommended air circuits**

<Compressed air line>

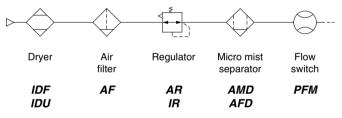

<Vacuum line>

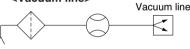

Suction filter Flow switch

SFD100

Others

## **M** Warning

- 1. After the power is turned on, the switch's output remains off while a message is displayed. Therefore, start the measurement after a value is displayed.
- 2. Perform settings after stopping control systems.

Operation reflects the new values when settings are made. However, if the power is turned OFF in that state, the settings return to the values before the change when the power is turned ON again. Make sure to press the S button to save any setting changes before turning OFF the power.

PF2A PF2W PF2D IF

PFM

PFMV



Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 892 to 896 for Flow Switch Precautions.

### Settable Range and Rated Flow Range

## **A** Caution

### Set the flow rate within the rated flow range.

The settable rate range is the range of flow rate that can be set in the switch.

The rated flow range is the range that satisfies the switch specifications (accuracy, linearity etc.).

It is possible to set a value outside of the rated flow range if it is within the settable range, however, the specification is not be guaranteed. The flow range if using CO<sub>2</sub> is given in brackets.

Contact	Flow range									
Sensor	0.2 <i>d</i> 1	min 0.5	5 <i>d</i> /min 1 <i>d</i>	/min 2 <i>d</i> /	'min	10 <i>t</i> /mi	in 25 <i>t</i> /r	min 50	∉/min	100 <i>t</i> /min
PFM710 PFM510	0.2 <i>d</i> /min 0.2 <i>d</i> /min 0					1	0 <i>e</i> /min (5 <i>e</i> /min) 0.5 <i>e</i> /min (5.2 <i>e</i> /r 0.5 <i>e</i> /min (5.2 <i>e</i> /r			
PFM725 PFM525	0.5 d 0.5 d	i i	i i					25 //min (12.5 //min 26.3 //min (13.1 // 26.3 //min (13.1 //	min)	
PFM750 PFM550	0	1	e/min e/min						50 ℓ/min (25 ℓ/min) 52.5 ℓ/min (26.2 ℓ/min) 52.5 ℓ/min (26.2 ℓ/min)	
PFM711 PFM511	0		i i	2						100 <i>d</i> /min (50 <i>d</i> /min) 105 <i>d</i> /min (52 <i>d</i> /min) 105 <i>d</i> /min (52 <i>d</i> /min)

Rated flow range

Displayable range

Settable range

In the case of the PFM5 series, the displayable and settable ranges are the same as the PFM3 series flow monitor.